



Einhell

EXPERT

POWER X-CHANGE

Cordless Coffee Maker

TE-CF 18 Li-Solo

Item No.: 4609990

Ident No.: 21013

Bar Code: 4006825672510

With the Einhell cordless coffee maker TE-CF 18 Li-Solo, you can enjoy fresh coffee anywhere. As part of the Power X-Change family, it can be used in combination with any battery or charger from the system. The cordless coffee maker enables quick preparation of filter coffee or commercial coffee pads in about 5 minutes, has a removable 240 ml water tank and comes with a dustproof stainless-steel coffee cup with lid. Lightweight and portable thanks to its carrying handle, it is perfect for on the go. Its rubber feet ensure stability. It comes with a measuring spoon, a ground coffee container with filter, and a coffee pad holder. Comes without battery or charger.

Features & Benefits

- Member of the Power X-Change family, 1 x 18 V battery required
- 2-in-1: filter coffee machine and coffee pad machine in one
- Coffee making at max. 80 °C for optimum enjoyment
- Removable 240 ml water tank for one cup of coffee
- For cups up to 90 mm height
- Easy transport thanks to integrated handle
- Cup holder prevents the cup from falling out during transport
- Rubber feet for secure standing
- Incl. stainless steel coffee cup with dust-proof lid
- Incl. dosing spoon
- Incl. coffee powder container with 1 x coffee filter
- Incl. container for commercially available coffee pads
- Supplied without battery and charger (sold separately)




Technical Data

- Tank volume 0.24 L

Logistic Data

- Gross weight (kg) 2.29
- Product weight (kg) 1.17
- Dimensions single packaging 322 x 185 x 267 mm
- Pieces per export carton 4 Pieces
- Gross weight of export carton 9.7 kg
- Dimensions export carton 655 x 380 x 282 mm
- Container quantity (20"/40"/40"HC) 1632 | 3360 | 3780

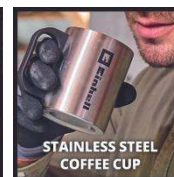

Available as special accessories



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Coffee Cup TE-CF 18 Li-Solo
Coffee Machine/Water Cooker Ac
Item No.: 4609991
Bar Code: 4006825672831
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory