



Parts List

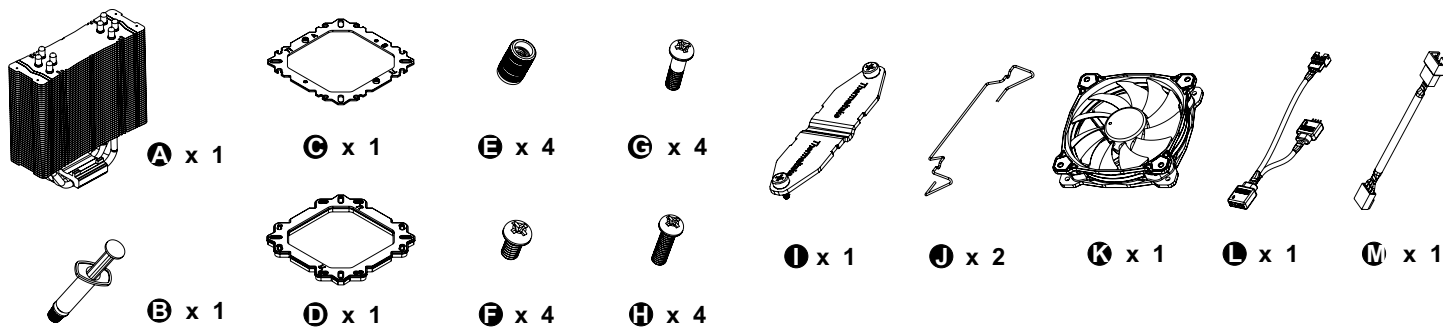


Intel Installation Guide

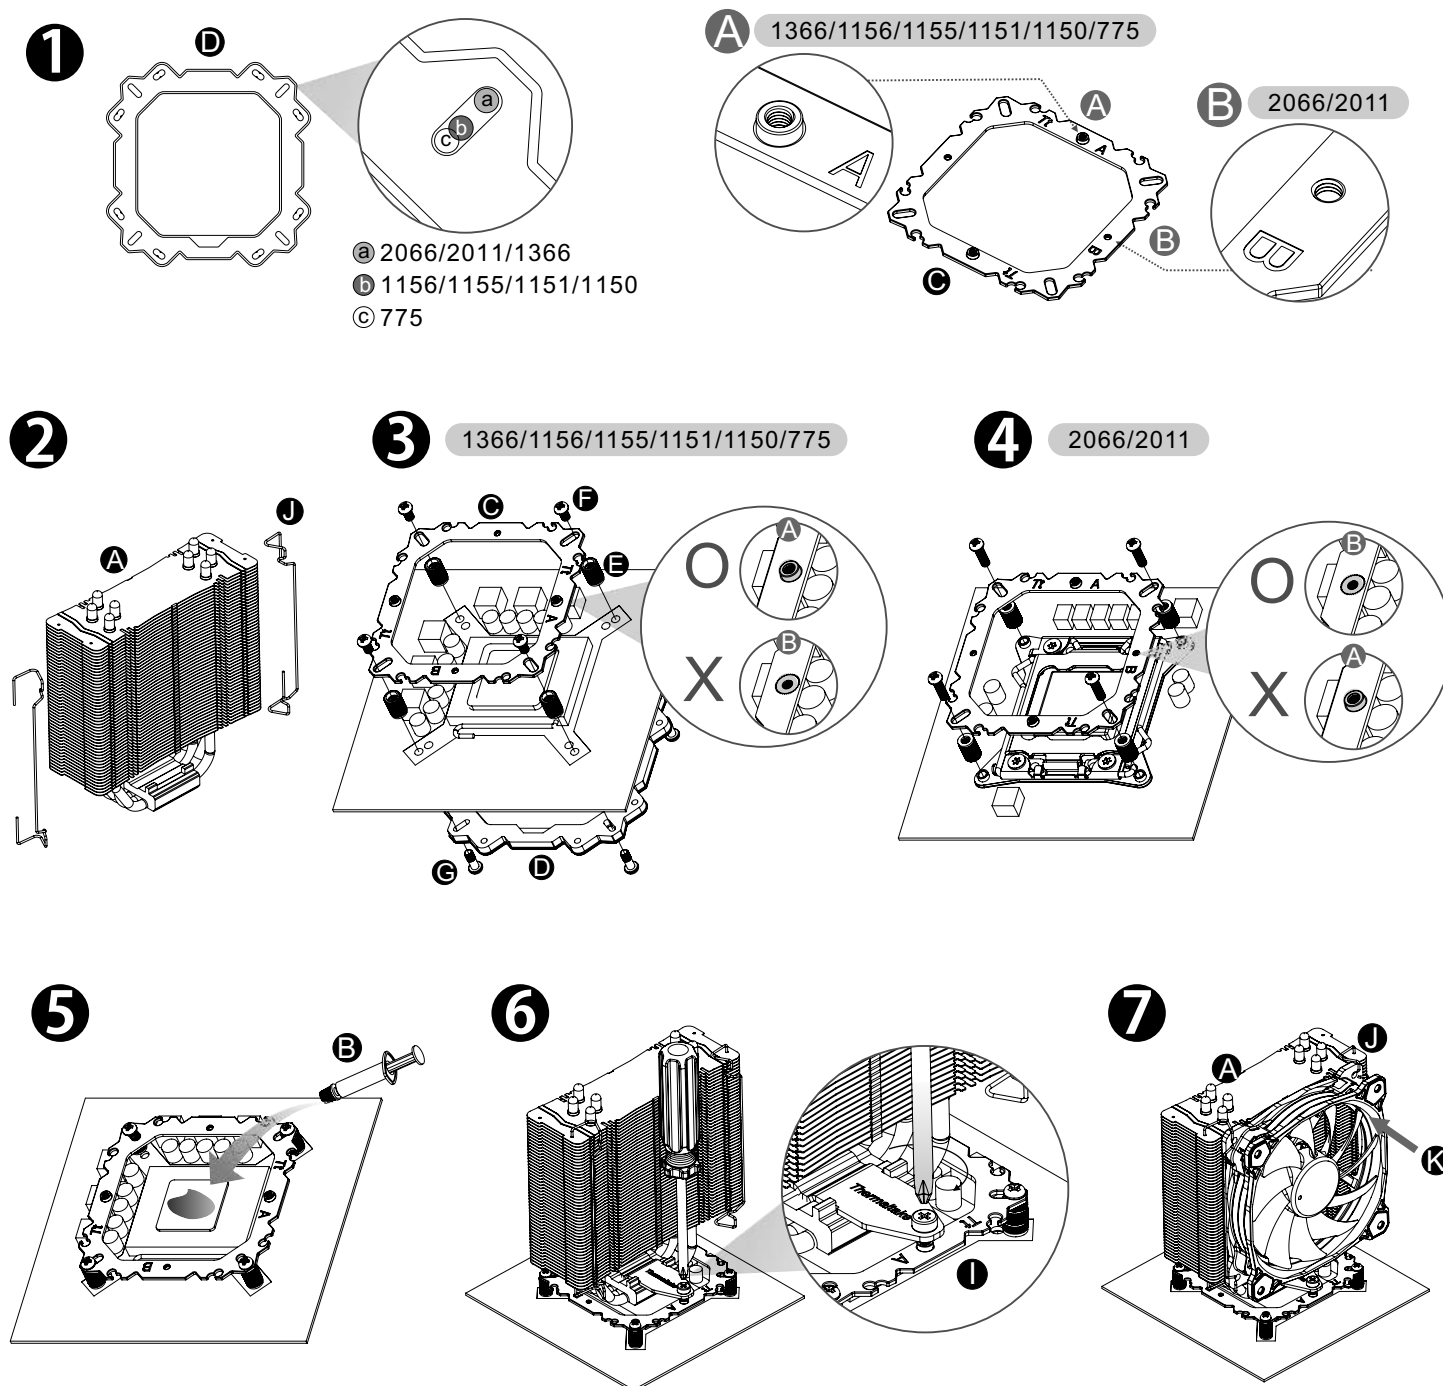

AMD Installation Guide


1

FM2/FM1/AM3+/AM3/AM2+/AM2 AM4

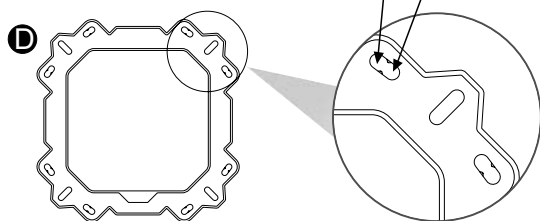


A


AM4/FM2/FM1/AM3+/AM3+/AM2+/AM2

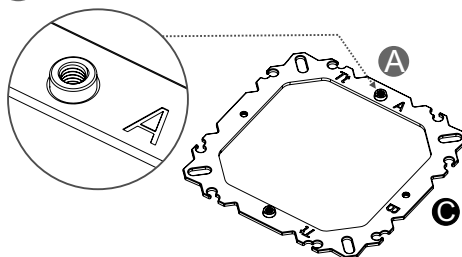



2

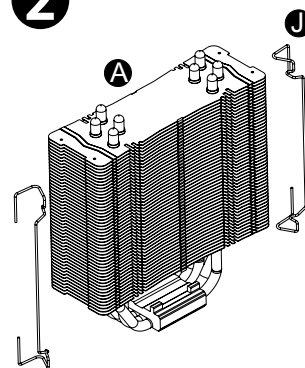


3

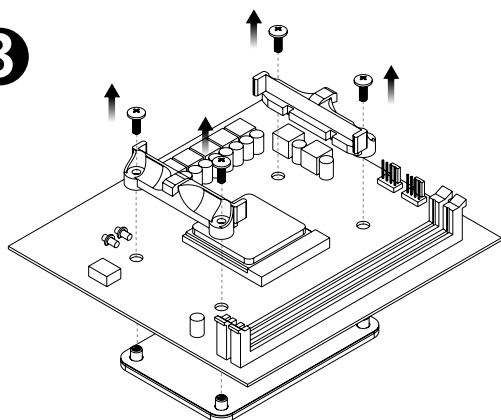


4

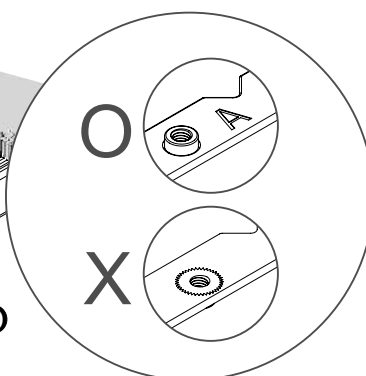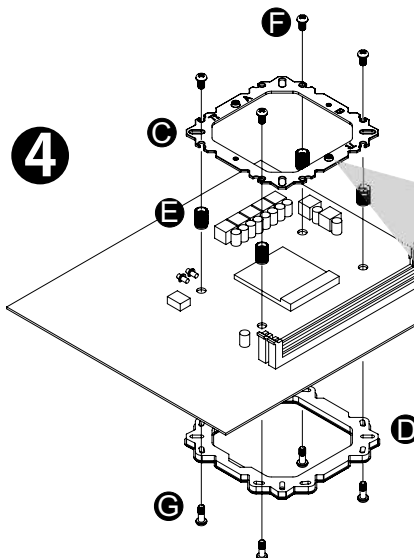


5

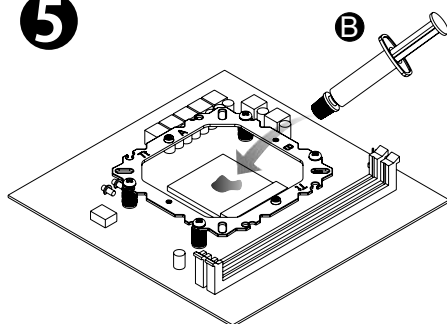

6

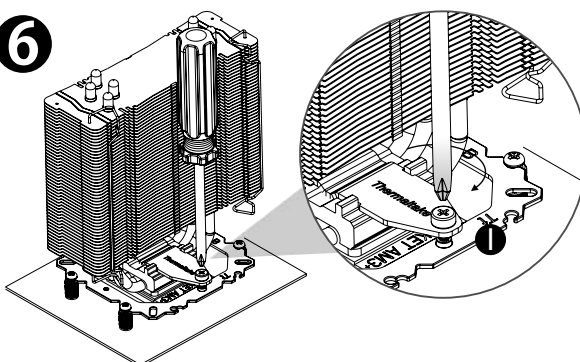


7

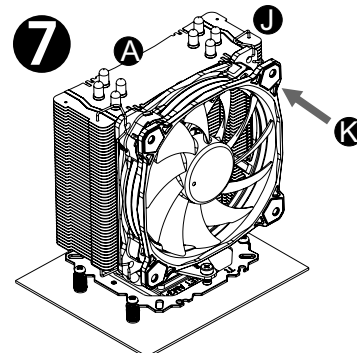


MB Sync Installation Guide

1

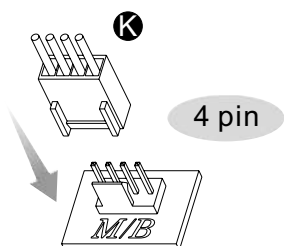


2

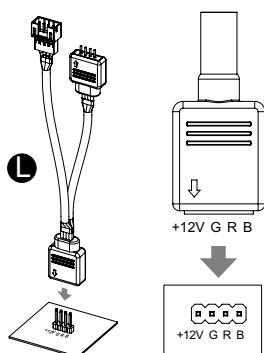

CAUTION

Please power off the PC and check the Positive and Negative ends on the connector before connecting the cable to mainboard. Connecting the wrong end can damage the controller.

3

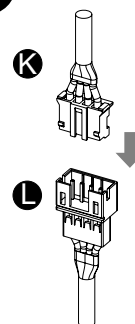

Connect the mainboard sync cable to mainboard.

Installation is done.