

ENGINEERING
TOMORROW



User Guide

Danfoss Ally™ Gateway



1. Danfoss Ally™ introduction	4
1.1 Key features	4
1.2 Identify your Danfoss Ally™	4
1.3 Danfoss Ally™ components and communication map	5
2. In the package	6
3. Technical specifications	6
4. Download and install Danfoss Ally™ App. First use	7
4.1 Installation of Danfoss Ally™ App	8
4.2 Danfoss Ally™ App account registration	8
4.3 Pairing Danfoss Ally™ Gateway with the App	8
4.4 Adding Danfoss Ally™ subdevices to the system	8
5. Main screen and menu overview	9
6. Functions and settings overview	10
6.1 Setting temperatures	10
6.2 Create your own schedule	11
6.3 Vacation	11
6.4 Override a vacation	12
6.5 Cancel an existing vacation programme	12
6.6 Pause	12
8. Data security	13
9. Safety precautions	13
10. Disposal	13

1. Danfoss Ally™ introduction

Danfoss Ally™ gives you all the benefits of a full-blown smart heating system – in a simple easy-to-use app. With Danfoss Ally™ you get full control of your radiator and floor heating as well as your heating bill. From virtually anywhere and at any time whether you're at home or on the go. You can even control your heating system with your voice as Danfoss Ally™ speaks with all your other IoT friends.



The intuitive app user interface is designed to make your everyday life as simple and comfortable as possible. The app guides you through the quick set-up. Lets you fit your home heating to your daily routines. And gives you the complete overview and control at all times.

Danfoss Ally™ is Zigbee 3.0 certified. This means that it speaks the same wireless language as tons of other smart home devices around the globe. Allowing you to connect Danfoss Ally™ to your existing smart home setup. And to make your smart home even smarter.

1.1 Key features

- Full control of radiator and underfloor heating via the app on your smartphone
- A higher level of comfort and energy efficiency by adapting room temperature to a daily schedule
- Easy to use and install with the intuitive app control
- Designed to bridge form and functionality
- Remote control from everywhere
- Up to 30% energy savings
- Fits all valves
- A maintenance-free thermostat – the battery lasts up to two years
- Works with Amazon Alexa, Google Assistant, Apple Voice Control
- Excellent temperature control
- EPBD compliant
- Open API
- Zigbee 3.0 certified

 
1.2 Identify your Danfoss Ally™

Product	Installation Guide - Languages	Code no.
Danfoss Ally™ Gateway	EN, DE, DA, FR, IT, PL, CS	014G2400
Danfoss Ally™ Starter Pack	EN, DE, DA, FR, IT, PL, CS	014G2440

1.3 Danfoss Ally™ components and communication map


We know how inter connectivity is the secret behind a truly smart home. Where devices are flawlessly connected in an intelligent network. In a smart ecosystem that allows you to control your world in your way.

Danfoss Ally™ is Zigbee 3.0 certified. This means that it speaks the same wireless language as tons of other smart home devices around the globe. Allowing you to connect Danfoss Ally™ to your existing smart home setup. And make your smart home even smarter.

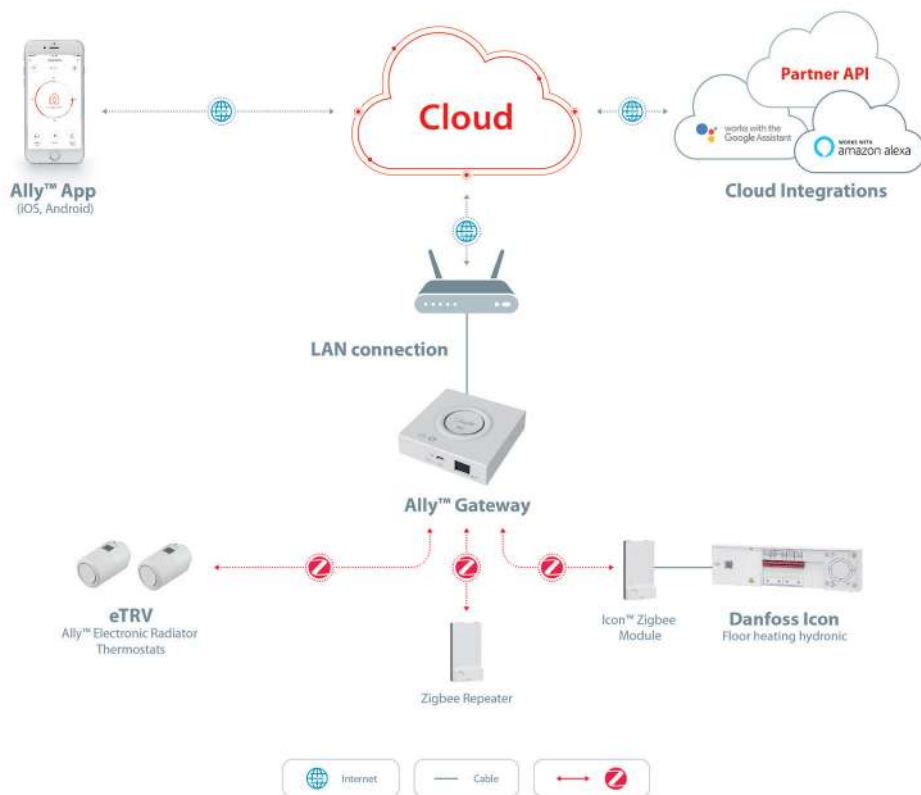

2. In the package

 Danfoss Ally™ Gateway are supplied with Quick Guide, LAN cable, Power supply cable.

			
Danfoss Ally™ Gateway	Quick Guide	LAN cable	Power supply cable



3. Technical specifications

Danfoss Ally™ Gateway	
Device Function	Smart Home Gateway
Recommended Use	Residential indoor (pollution degree 2)
Application	Radiators, water-based floor heating
LED Indicators (green)	Power/Status, Network Connection
Button	Press Reset Button for 5 sec. to perform factory reset
Power Supply	5 VDC
Adaptor	110 V ~ 240 VAC, 5V 1A DC
Power Consumption / Standby	< 5 W / < 2 W
Wired Communication	10/100M Ethernet Port (RJ45, LAN)
Wireless Communication	Zigbee / IEEE 802.15.4
Transmission Frequency / Power	2.4 GHz / < 20 dBm (79 mW)
Wide Open Transmission Distance	300 m outdoor line-of-sight
Firmware Update	Support for over the air updates
Operation Temperature	-10 °C to 55 °C
Storage Temperature	-20 °C to 60 °C
Size	95 mm x 95 mm x 23 mm
IP class	20
Integrations	Amazon Alexa, Google Assistant, Partner API
Approval, markings etc.	  

4. Download and install Danfoss Ally™ App. First use.


Danfoss Ally™ gives you all the benefits of a full-blown smart heating system – packed in a simple easy-to-use app. No more control unit – now your smartphone is all you need to control and monitor all your radiators and floor heating.

  In this way, you're always in control of your home heating. Whether you're at home or on the road. You simply get more flexibility and comfort without the need for complicated hardware.

Step 1. Download the Danfoss Ally™ App from Google play or App Store	     smartheating.danfoss.com
Step 2. To enable smartphone control, your Danfoss Ally™ Gateway needs to be connected to the mains power and Ethernet use the cables provided with Ally™ Gateway.	
Step 3. Connect your Danfoss Ally™ Gateway to the network. <i>Make sure your mobile device is connected to Wi-Fi from the same router as the Gateway is connected to with cable.</i>	
Step 4. Finalise system setup by adding subdevices.	



 
① Install Danfoss Ally™ App on your smartphone

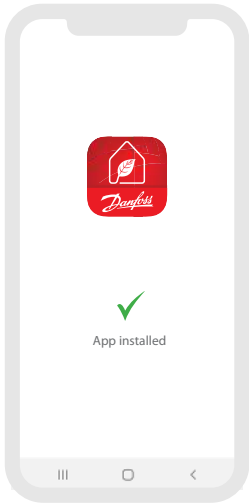


② Open the App and register your account



 ③ Add Your Danfoss Ally™ Gateway

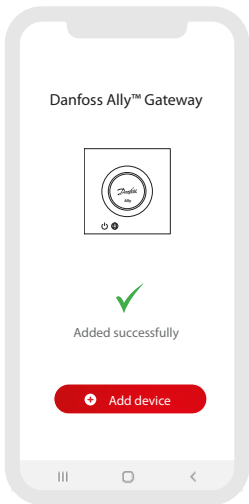

 ④ Add your Danfoss Ally™ battery and mains powered subdevices

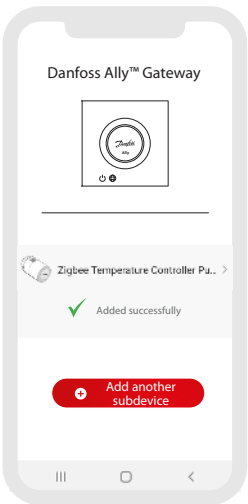

! Screens are different than actual Danfoss Ally™ App

5. Main screen and menu overview

The At home screen provides general information about weather and device status in the tiles. Under each room name, all assigned devices to the particular room is shown, as well as heating status and current room temperature. * Weather function displays information in English language only. Data is provided by darksky.com	Press ‘Smart Gateway’ tile on the Home screen and tap on the pen upper right corner to get to ‘Smart Gateway’ menu. The menu contains: • ‘Device information’ about Virtual ID, IP and MAC address, Time Zone. • ‘Share Device’ for home members, ‘FAQ & Feedback’ to find answers or submit request. • ‘Check for Firmware Update’ for Main Module and Zigbee Module and ‘Remove Device’ with all related devices which was connected before.	Pressing ‘Radiator Thermostat’ tile on the Home screen and tap on the pen upper right corner to get to ‘Radiator Thermostat’ menu. The menu contains: • ‘Device information’ about Virtual ID, Time Zone. • ‘Third-party Control’ to connect system with Amazon Alexa and Google Assistant voice control. • ‘Share Device’ for home members. • ‘FAQ & Feedback’ to find answers or submit request. • ‘Check for Firmware Update’ for Zigbee Module and ‘Remove Device’ from current room.

 
 
5.1 Rooms with several radiator thermostats



If several Radiator thermostats are assigned to one room the Danfoss Ally™ App will automatically create a group. This is to ensure settings are synchronized between devices in same room. It is recommended to always adjust schedule and preferred temperatures from the group to ensure the most efficient performance.

If settings are changed on the individual devices then data is not synchronized with the group. A result of this may be inefficient heating regulation.

5.2 Add new devices to existing system

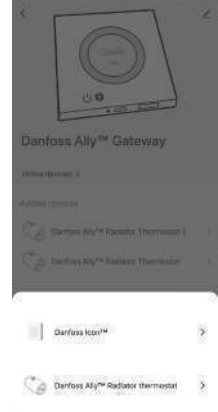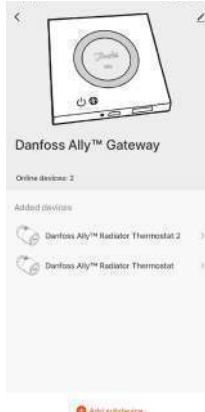

Select Danfoss Ally™ Gateway to add additional Danfoss Ally™ Radiator Thermostats or Danfoss ICON devices to existing system.

Select 'Add subdevice' and chose between Danfoss Ally™ Radiator Thermostat or Danfoss ICON.

Chose between Danfoss Ally™ Radiator Thermostat or Danfoss ICON. The App will guide through the installation flow.

6. Functions and settings overview

	23.0°C	Room temperature
		Manual mode
		Heating schedule
		Away mode
		Pause
		At home mode
		Pre-Heat is used to ensure you have the right temperature when you want it. When Pre-Heat symbol is showing it means that it is ramping up to the next scheduled At Home mode.

6.1 Setting temperatures

Set your own temperatures for your setback periods in the Danfoss Ally™ App.

	For changing temperature press Menu button on the main screen → Settings → Set temperature.
	Scroll on temperatures to set your preferred permanent room temperature.
	In case you need to set temporary temperature, just turn the thermostat wheel and choose desired value. Temporary temperature changes are valid until next scheduled temperature change.
	The Danfoss Ally™ can be set from 5 °C to 35 °C. Danfoss recommend a difference between 'At Home' temperature and 'Away/Asleep' that does not exceed 4 degrees.

6.2 Create your own schedule

To make temperature adjustments go to the Menu → settings → Temperatures. Within the Danfoss Ally™ App you can create your own schedule. You can choose any setback times within 24 hours and set up to 3 At Home periods per day.	The weekly schedule shows the 'At Home' periods in red. The 'copy' functionality allows to copy the schedule to other days.	The Danfoss Ally™ App display shows both the 24 hour clock wheel, showing 'At Home' time in red and a summary of schedule, with the detailed times set. The minimum 'At Home' period is 30 minutes.


6.3 Vacation

Use a Vacation programme to save energy, when you are away or at home. Vacation programme is set within the Danfoss Ally™ App.

A Holiday mode Away or At Home can be planned or set straight away (Now).	The Danfoss Ally™ App displays Vacation where it can be adjusted.	The Danfoss Ally™ App display confirms your At Home vacation with options Now or by Plan.	Planned Vacations uses a calendar and time setting.	Schedule Vacation in the Danfoss Ally™ App.


6.4 Override a vacation

 If returning earlier than expected you might wish to shift from the Vacation programme to your normal schedule.

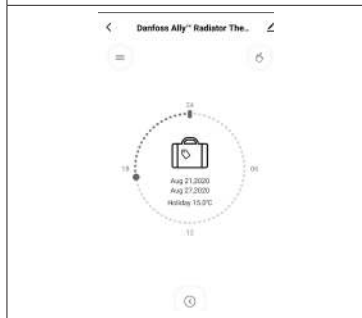

When in 'Vacation' setting the Danfoss Ally™ App will give options to end the Vacation period or edit the dates and times.

 6.5 Cancel an existing vacation programme

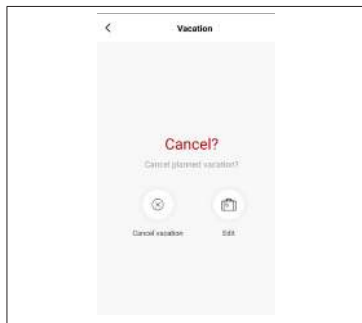

If the Vacation is planned for the future you can simply edit the dates or cancel the programme.

6.6 Pause

The Pause programme keeps the setback temperature until another programme is selected.



When Danfoss Ally™ is turned down to Min level manually, a notification banner is shown, and center icon switches to 'Pause'.

To exit Pause click the centre icon on the Danfoss Ally™ App and return to the scheduled or manual setpoint.

8. Data security

The data security for of the Danfoss Ally™ Gateway and Danfoss Ally™ App, that is paired to your smartphone is guaranteed.

Data encryption: The wireless connection to your Danfoss Ally™ Gateway is protected against threats from unknown devices with latest encryption technology.

In addition to the security functions that ensure data protection at any point during the data transmission from your smartphone to the Danfoss Ally™ Gateway.

9. Safety precautions

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Danfoss A/S declares that the radio equipment type Danfoss Ally™ is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.danfoss.com

The gateway is not intended for children and must not be used as a toy. Do not leave packaging materials where children may be tempted to play with them, as this is extremely dangerous. Do not attempt to dismantle the gateway as it contains no user-serviceable parts.

10. Disposal

Danfoss Ally™ Gateway must be disposed of as electronic waste.



Danfoss A/S

Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without substantial changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.