 


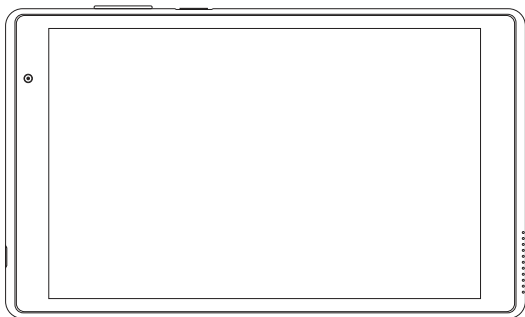

TIO-80105KBLUE/PINK

denver.eu

October , 2023



FR

Cet appareil, ses
cordons et ses
accessoires sont
recyclables

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE



OU


Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Order	Language	Abbrevation
1.	English	ENG
2.	German	GER
3.	Danish	DEN
4.	Dutch	NED
5.	French	FRA
6.	Spanish	ESP
7.	Italian	ITA
8.	Portuguese	POR
9.	Swedish	SWE
10.	Finnish	FIN
11.	Norwegian	NOR
12.	Polish	POL

Important

Wifi connection must be set up and Google play account (to download apps and games) must be created, before you start up Kids Space

 This tablet comes with Kids Space software. You will be guided through setup of an account, when starting the app the first time

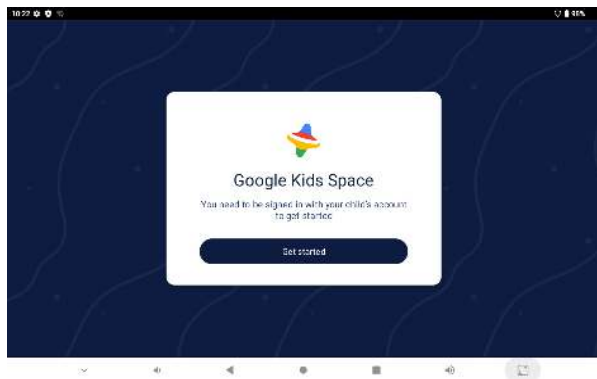

Important safety information

WARNING: Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference. Read all the safety information below before using this tablet PC.

1. For the electrostatic discharge (ESD) test of EN55035, it was found that manual operation (by switching power ON/OFF switch) is needed to resume normal operation as intended after the test.
2. This product is not a toy. If operated by children, please always make adult supervision.
3. Please keep the product away from pets.
4. Warning this tablet PC is with lithium battery inside, so pls follow below:



Do not try to open the tablet! The device may contain parts with deadly voltage.

Do not expose to heat, water, moisture, direct sunlight!

Only charge with the original adapter supplied with this product!

Do not attempt to replace the tablet PC battery yourself- you may damage the battery, which could cause overheating and injury. The lithium-ion battery in tablet PC should be replaced only by skilled engineer and must be recycled or disposed of separately from household waste. Do not incinerate the battery.

Repairs or service should only be performed by qualified personnel.

5. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

6. The direct plug-in adapter is used as disconnect device, the disconnect device shall re-main readily operable. So make sure there is space around the power outlet for easy access.

7. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.


8. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

9. Product operating and storage temperature is from -10 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.

Table of Contents

Table of Contents	3
Unit at a Glance	4
Getting Started	5
About Applications	7
Preinstalled Applications	7
Connecting to the Internet	8
Email	10
Transferring Files	11
Troubleshooting	12
Specifications	13

 Unit at a Glance

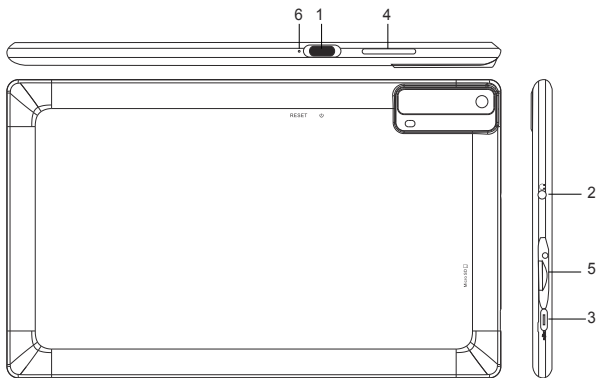

1. POWER

Press to turn the unit on, or to turn the screen on or off. Press and hold to access the Power Off menu.

2. Headphone

Audio output connection for headphones.

3. USB

Connect to USB device or a computer to transfer data (e.g. Music, videos, photos, files)

4. V-/V+

Press this button to adjust the volume

5. microSD

Load external microSD memory cards here.

6. RESET

Use a needle or paper clip to reset unit

Press and hold the Power key until the LCD screen turns on. Wait until the Home screen appears;

Getting Started

Turning the Tablet on or off

To turn the tablet on:

Press and hold the Power key until the LCD screen turns on and then let go. Wait until the Home screen appears, the tablet is now ready for use.

To turn the tablet off:

1. Press and hold the Power key until the power off menu appears.



2. Touch Power off to turn off the tablet.

Turning the Screen on or off (Standby)

When the tablet is on, you can turn off the screen to conserve battery power. Simply press the Power key once to turn the screen off. Press the Power key again to turn the screen back on.



To conserve battery life, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This Screen timeout option can be found in the Display menu.

Getting Started

Unlocking the Screen

 
When the screen turns off, you will have to unlock the screen when you turn it back on. To unlock the screen, drag the lock icon towards up side of the screen. This will unlock tablet.



About Applications

To enter into the application page, please slide upward on the home screen.

Launcher screen:

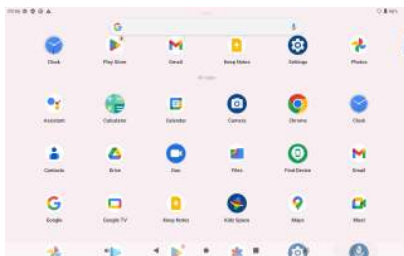

The screen shown above is for illustrative purposes only. Reserves the right to modify and improve the final list of applications available on the tablet.

About Applications

Preinstalled Applications

Some applications have been installed on your tablet for your convenience. These applications include:



Browse the web.



Perform simple mathematical operations.



Take pictures or videos with the frontfacing camera.



Check your e-mail.



Play music.



Access the Settings menu to adjust the tablet's options.

Preinstalled Applications

Installing Applications

You can also download and install additional applications from the device's applications marketplace, Google™ play store, or other sources.

Connecting to the Internet

Connecting to Wireless Internet

1. Press the Settings  icon, find Network & Internet

2. Tap '  ' to activate Wi-Fi.



 
3. Tap Wi-Fi to start detecting networks. The available networks will be listed.

To manually add a network, select the Add Network button.

4. Select Connect from the pop up menu.

5.If the network is secured with a password, enter the password to continue.

6.Once finished connecting, the display will show Connected under the name of the network.

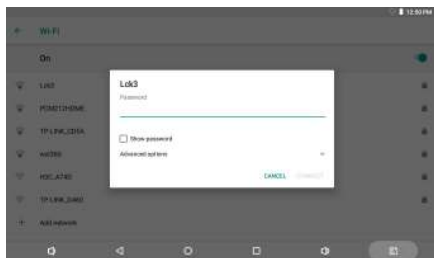

To conserve battery life, turn off Wi-Fi when not in use.

Email

Setting Up an Email account

1. Press Gmail icon  under App menu.

2. Enter your email address and password, then press Next.

If this does not work, you will need to manually configure your account. Before attempting to configure manually, re-enter your email and password to make sure they are correct.



Manually Configuring an Email account

It is recommended to consult an IT professional before attempting to manually configure your email address.

1. To set up your email manually, detailed information is required. Check your provider's website or phone support for individual provider information.

2. The first thing you will need to determine is the server type. While most servers are POP3, IMAP and Exchange are also supported services.

3. Enter your email address and password then press Next.

4. Fill in all information for the Incoming server portion of the manual setup.

5. Press Next and the app will test your settings. Wi-Fi is required to be active for this step.

6. Fill in all information for the Outgoing server settings.

 
7. Press Next and the app will test your settings. Wi-Fi is required to be active for this step.




Transferring Files

Transferring Files with a Computer

- 1.To begin transferring files to your computer, plug one end of the included USB Type C to USB cord into the unit, and the other into the USB port on a computer.
- 2.Slide from upside downward till the device show below screen.

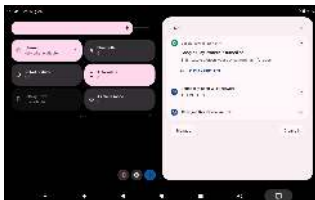

 3. Tap the icon

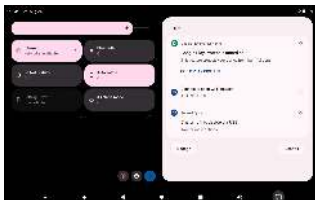

4. Click "Tap for more options" and choose "File Transfer". You will now be able to transfer files to your computer.



Troubleshooting

1.1 Device can not connect to Wi-Fi

- Ensure the wireless network is working by testing it using another wireless device.
- Ensure the device and the wireless router is within the range of the wireless network to be connected too. Walls or other obstructions will reduce the possible distances between wireless devices.
- Ensure the security password being used is correct.

1.2 Device doesn't turn on

- You can not turn on the device when the battery charge is below the critical level, please charge the battery.
- Use a needle or paper clip to reset unit on the back of the device and check if it is restarting is normally or not.
- Check if the charger is connected correctly.

1.3 Heat Issues

- When running multiple applications, using the screen on its brightest setting, or when being charged, this device can get quite hot. This is normal and should not cause any inconvenience when in use.

1.4 System has anomalies and doesn't work correctly

- Installing some third-party applications may cause the system not to operate correctly. Press the RESET button and perform a system reset to resolve this issue.

1.5 Cannot set E-mail Account or registration application

- Ensure that the MID is connected to a Wi-Fi network and can connect to the Internet.
- Ensure you E-mail settings have been entered correctly for the account being accessed.
- Make sure your system time and local time are correct.

1.6 Can not record

- Use a needle or paper clip to reset unit on the back of the device, then check if the record function works correctly.

1.7 The stand-by time of the device is too short

- The duration of the lithium battery varies with environmental temperature changes and the service conditions. If the environment temperature is too low or too high, the duration of the battery will be affected. It is recommended to use this device at normal temperature.
- Battery life is dependent on usage. High volume, WIFI, and the frequent use may cause the battery to be drained at a higher rate.

1.8 No sound via earphone

- Please check if the volume setting is 0.
- Please check if audio file is broken, and try to play another audio file to confirm. If the audio file is broken, it may cause severe noise or static.

1.9 The color distortion of video or picture display

- Use a needle or paper clip to reset unit on the back of the device to solve this issue.

1.10 Can not copy files

- Please check if the device is connected to the computer correctly.
- Please check if the memory space is full.
- Please check if the USB cable is broken.

1.11 Other troubles Please follow up the steps as below to fix the other troubles before you return the MID/Tablet PC to us:

- Step 1: Use a needle or paper clip to reset unit on the side of the device, then check if the function works correctly
- Step 2: Upgrade the firmware from the PC and restart the device and then check if the function works correctly.

Specifications

Please visit denver.eu for the latest product information. Design, specifications, and manual are subject to change without notice.

RAM	4GB DDR3
Storage	64GB flash built-in; micro SD card slotStorage (max.32GB supported)
Display	8" IPS (1280X800), Capacitive touchscreen
Wi-Fi Networking IE	IEEE 802.11 b/g/n
Audio Output	3.5mm headphone
PC Interface	USB 2.0 high speed
Additional Features	Built-in microphone Camera (2.0MP+2.0MP) 1 W speaker Octa Core Bluetooth
Operating System	Android™ 13
Power	Rechargeable Li-poly battery power 3500mAh Power Adapter (5V,2A)

Bluetooth Connectivity

This device features Bluetooth connectivity. To use this function, you should,

- (1) Open the setting menu and select "Bluetooth";
- (2) Slide the switch to turn on Bluetooth. The tablet will detect automatically all Bluetooth devices available in service range and list them.
- (3) Select one from the list to start pairing.

Once pairing is done, you can transfer files between the pair of devices.

Manufacturer's name or trade mark, commercial registration number and address	Shenzhen Run Sheng Feng Power Supply Technology Co., Ltd commercial registration number: 91440300580068676U 3 rd Floor, 4 th Building, Zone A Xinfu Industrial Park, Chongqing Road, Fuyong Street, Bao'an District, Shenzhen, China
Model identifier	RSF-DY080-0502000EUU
Input voltage	100-240V
Input AC frequency	50/60Hz
Output voltage	5V
Output current	2A
Output power	10W
Average active efficiency	78.79% at 115V 60Hz 79.09% at 230V 50Hz
Efficiency at low load (10%)	79.37% at 115V 60Hz 76.55% at 230V 50Hz
No-load power consumption	0.037W at 115V 60Hz 0.056W at 230V 50Hz

Google, Android, Google Play and other marks are trademarks of Google LLC.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soefften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

Hereby, DENVER A/S declares that the radio equipment type TIO-80105KBLUE/PINK is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write modelnumber: TIO-80105KBLUE/PINK. Now enter product page, and red directive is found under downloads/other downloads.

Wi-Fi Operating Frequency Range: 2412MHz-2472MHz

Max Output Power: 13dbm

Bluetooth Operating Frequency Range: 2402MHz ~ 2480MHz

Contact

Nordics

Headquarter

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail

For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900-3437623**

E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, nº 23 – nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: +34 960 046 883
Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service

Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail

support.de@denver.eu

Fairfixx GmbH

Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Tel.: **+49 851 379 369 69**

E-Mail: **denver@fairfixx.de**

Austria

Lurf Premium Service GmbH

Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**

E-Mail: **denver@lurfservice.at**

If your country is not listed above,
please write an email to
support@denver.eu



DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu

Version 1.1