 


momcozy

PORTABLE BOTTLE WARMER

MW03

User Manual

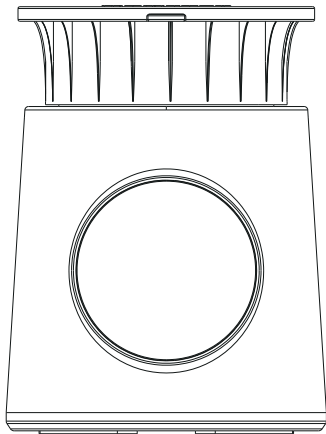

Please read the user manual carefully before using this appliance.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	02
PARTS LIST	04
INSTRUCTIONS FOR USE	05
SPECIFICATIONS	05
CONTROL PANEL	06
USING THE BOTTLE WARMER	07
CLEANING AND MAINTENANCE	09
TROUBLESHOOTING	09

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE.

1. Read all instructions.
2. The connector comes with an O-ring. A missing O-ring could result in water/breast milk leakage.
3. The product has a built-in lithium battery. Do not use it in environments with strong static electricity or magnetic fields, nor should it be dried in a microwave oven or a disinfection cabinet, to avoid potential safety hazards.
4. This is not a toy. Please keep all parts out of the reach of children.
5. User repair or separation of the product is not permitted. Quality issues must be handled by the manufacturer, or its authorized service center, to avoid safety hazards.
6. Clean the product prior to each use.
7. Always use the product on a dry, flat surface away from water.

8. Do not place on or near a hot gas stove or electric burner, or in a heated oven. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
9. The operating temperature range for this product is from around 50 °F to 90 °F (about 10 °C to 35 °C).
10. Do not operate the bottle warmer without a bottle containing water or breast milk. The bottle warmer will shut off automatically in the absence of such to prevent dry burning.
11. Do not move the appliance when in use.
12. To protect against electrical shock, do not immerse the power cord or plugs in water or other liquids.
13. Please charge the product only with a certified power adapter (5V 2A or 3A).
14. Unplug the power supply from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
15. When not in use, do not expose the product to direct sunlight, high temperatures, or disinfectants, as doing so may affect product performance.
16. Regularly check and remove debris from the charging port to avoid dust build-up and charging problems.
17. Fully charge the appliance before its first use.

18. Unplug the product when the battery is fully charged to avoid fire hazards.

19. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capacity, or by persons lacking the requisite experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

20. Do not use the appliance for anything other than its intended use.

SAVE THESE INSTRUCTIONS

PARTS LIST

User manual * 1

Bottle warmer * 1

Lid * 1

USB Type-C charging cable * 1

Cleaning brush * 1

Connector * 5

INSTRUCTIONS FOR USE


Fully charge the appliance before its first use.

1. Open the packaging, take out the bottle warmer, and ensure all parts are included.
2. Wipe the bottle warmer with a damp cloth.
3. Allow it to sit for 12 hours to eliminate any unwanted smells related to production, packaging, storage, and transportation.
4. Fill the baby bottle with water or breast milk, fasten the baby bottle with the connector, secure the connector with the bottle warmer, and then start with your preferred temperature.

SPECIFICATIONS

Model	MW03	Input	DC-5V $\Rightarrow$ 3A DC-9V $\Rightarrow$ 2A
Wattage	80W	Baby Bottle Connector	5
Operating Temperature	90-122 °F / 32-50 °C	USB Port	USB Type-C
Charging Time	2-4 Hours	Note: For fast charging, please use the adapter with an output over 15W.	

 CONTROL PANEL

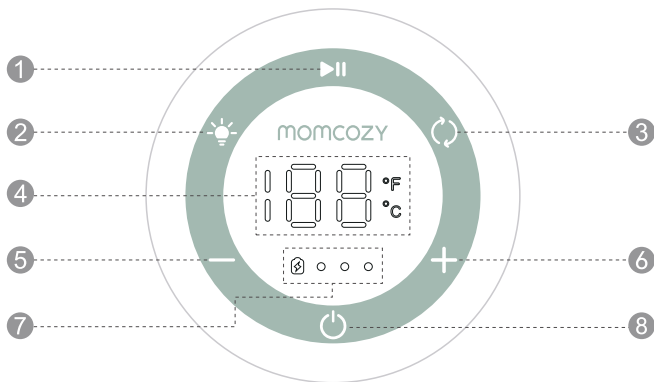

1 Milk Warming Setting /
Screen Lock

2 Light Brightness

3 °C / °F Selection

4 Temperature Display

5 Decrease Temperature

6 Increase Temperature

7 Battery Display

8 On / Off

USING THE BOTTLE WARMER

Step-by-step Instructions



1. Select the connector that fits your baby bottle, and fasten the bottle warmer with the connector. Check whether the "▲" of the connector is aligned with the locking area on the warmer.
2. Connect the baby bottle to the bottle warmer. Check whether the "△" of the connector is aligned with the locking area on the warmer.
3. Turn the bottle warmer upside down.
4. Long press  to turn on the device.
5. Press  to select °C or °F.
6. Press " + " or " - " to adjust the temperature.
7. Press  to start the milk warming setting and lock the screen.

8. Wait until a warming cycle is completed.

Note: The appliance will shut off automatically after 15 seconds if the connected bottle with no milk or water inside.

Turning On the Bottle Warmer

Press and hold  for 2s to switch on the bottle warmer.

Turning Off the Bottle Warmer

Press  to switch off the bottle warmer.

Note: The appliance will shut off automatically after 15 seconds if the connected bottle with no milk or water inside.

Temperature Setting

With a temperature range from 90-122 °F / 32-50 °C, short press " + " or " — " to select the desired temperature.

Temperature Selection

 
Press  to switch between °F and °C.

CLEANING AND MAINTENANCE

1. Pour clean water or detergent into the heating chamber.

2. Clean the machine with the brush provided.

Caution: Do not immerse in any liquid for cleaning.

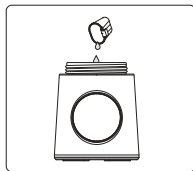

TROUBLESHOOTING

Problems	Solutions
Not working	Connect a baby bottle containing water or milk to the bottle warmer.
	Contact the manufacturer or its service center.
Milk leaks	Please check whether the connector is properly connected to the bottle and the warmer.
	Please check whether the adapter is tightly connected to the bottle and the warmer.

图档名称	Momcozy-MW03暖奶器说明书			版本号	A6	日期	2024-6-13
规格尺寸	120*120(h)mm				平面设计师	刘诗琪	
材质工艺	105g铜版纸/骑马钉						
印刷颜色	CMYK		数量	PCS (详情见合同)	包装工程师	/	
项目负责人	梁文标	文案编写/审核人		梁文标	设计审核人	/	
备注	出血线为2mm；刀模线仅供参考请勿印刷；图档版权归深圳市路特佳成网络科技有限公司所有，私自泄露、修改、使用文档所产生的一切责任后果我司将追究到底。				ROOT 路特创新		