

HAVIT H626BT WIRELESS KIDSHHEADPHONE PRODUCT MANUAL	Packing list: Headphone*1 Charging Cable*1 Dual 3.5mm audio cable*1 User's Manual*1 Certificate of quality *1 1	Production structure 1. Volume+/Next 2. Power switch 3. Volume-/Previous 4. Micro SD card slot 5. AUX port 6. Charging port 7. AUX Share port 2	Power on Long press the power switch for 3 seconds, LED lights up blue for 2 seconds and then alternately flashes blue and red with voice prompt, which means it enters pairing status. Bluetooth connection ---Follow the steps (Please make sure that your phone is built-in Bluetooth function) 1.---Hold down the power switch for 3 seconds, then LED alternately flashes blue and red with a voice prompt, the headphone enter the pairing status. 2. Activate the Bluetooth function and search for "HAVIT H626BT" referring to your phone instructions. 3. Manually click "HAVIT H626BT" to connect. If the LED turns to be steady blue with a voice prompt, the connection is successful. 4. The headphone can automatically connect the last device that you had paired. To re-connect, you just need to turn it on. Power off Long press the power switch for 5 seconds to turn off. Answering incoming calls ---Short press the power switch to answer incoming calls. 3
---Tip: Since some mobile phones default to answer calls via their own receiver, please refer to the instructions of your phone and set on your phone. End the current call ---Short press the power switch once to end the current call. Reject incoming calls --Press the power switch for 1.5-2 seconds when there comes a call. Last number redials Dual press the power switch to redial the last calling number. Mode switching Long press power switch 2 seconds and release after the beep to select mode between Bluetooth / Micro SD cards / FM. Music playing 1. Play/Pause: Short press the power switch; 2. PREV: Long press - to select the previous song; 3. NEXT: Long press + to select the next song; 4. VOL + : Short press + to increase volume; (There will be a prompt when it reaches the maximum volume.) 5. VOL - : Short press - to decrease 4	volume. (There will be a prompt when it reaches the minimum volume.) Wired mode: 3.5mm Audio Cable connecting To Audio Jack 1. The headset has two 3.5mm audio ports, R-side is the main audio port and L-side is the secondary audio port. 2. When the audio line is inserting the audio port of the R-side, the headset will automatically turn off, and enter Aux in mode; then the L-side is also inserting the audio line, both sides can be used as audio input source or share source. 3. The L-side audio port usually used as a share port. After the audio cable is inserted, the headset will not be power off if the headset is turn on. You can share the audio source of the headset with another headset connected to the L-side audio cable in Aux IN mode, Bluetooth mode or Micro SD mode. 4. When the headset is turned on. It is not recommended to use the L-side audio port as the audio source input. It may cause confusion between the Bluetooth audio or Micro SD card audio source being played by the headset and the L-side input audio source. Micro SD mode Insert a micro SD card and long press the 5	power switch for 2s and release after the beep, the headphone will recognize and automatically broadcasts MP3 format music in it. FM Operating Instructions 1. Long press the power switch for 2s and release after the beep to choose FM mode, then short press the power switch to scan and memorize the FM radio stations. 2. Long press - to select the previous radio station; long press + to select the next radio station. To charge the headphone 1. As product is built-in non-removable and rechargeable battery, please use the provided TYPE-C cable to charge. 2. Fully charge the product before the first use. It takes 2.5 hours to charge for the subsequent use. 3. Charge if the LED lights up red, and LED turns blue charging finished. Notes a. Please choose the charger that is certified by the regular manufacturer. b. The battery performance may decrease as repeating charging and using the product. It's a normal phenomenon for all rechargeable batteries. 6	Specification: Version: V5.0 Battery: 400mA Play time: 18H (60% volume) Talk time: 18H Charging time: 2.5H Warnings 1. Please follow the instruction to operate 2. Please charge the headphone with input power below 5V/1A, in order to protect the battery; 3. Please store or use the headphone in a normal temperature environment. 4. Please keep the headphone from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti-high temperature. 5. Don't jam the ports of the headphone, such as charger port, LED port and microphone etc. 6. In order to protect your hearing and extend the speaker service life, it is not recommended to adjust the volume to the maximum level for a long time. 7. Whatever reasons damage the headphone, please feel free to contact our after-sales staff in time rather than repair by yourself. Otherwise, you will accept without after-sales service. 7