 
 



AXIS TP3205

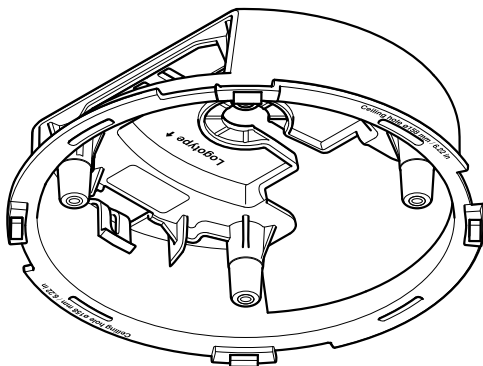

Installation guide
Guide d'installation
Installationsanleitung
Guida all'installazione
Guía de instalación
インストールガイド
Guia de instalação
Руководство по установке
설치가이드
安裝指南
Panduan instalasi

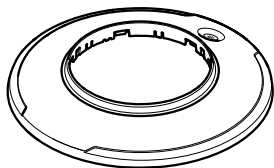

 
1x

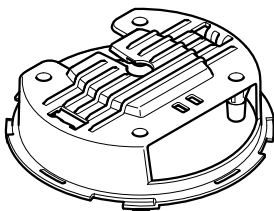

1x



 1x

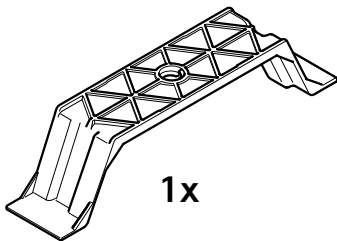


1x




4x

 
i

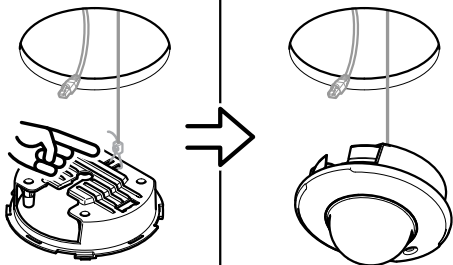

i

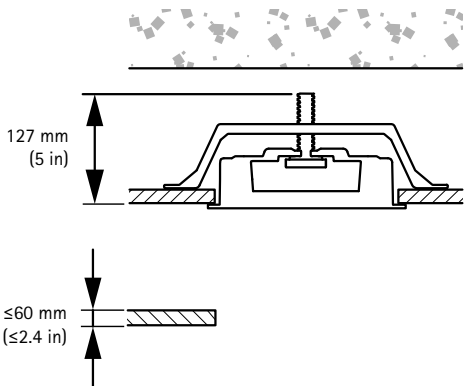 

 1.1

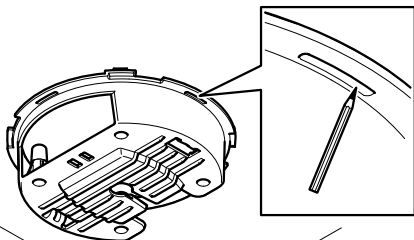


1:1




[axis.com/products/
axis-tp3205/support](https://axis.com/products/axis-tp3205/support)



 
Drill template

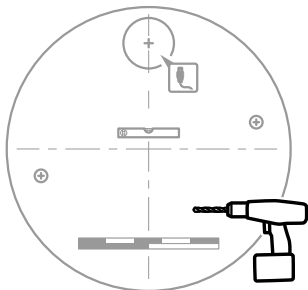




 
1.2

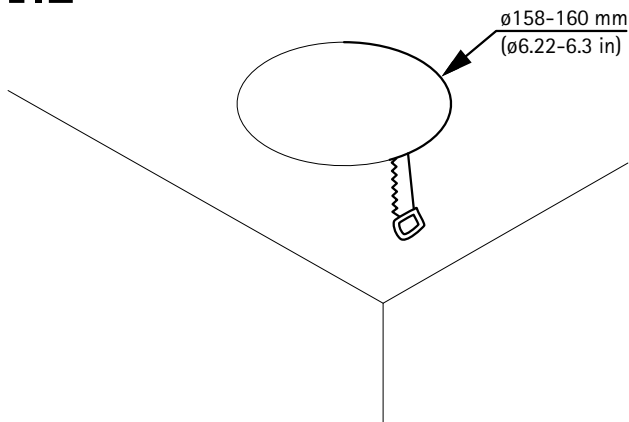


 
1.3

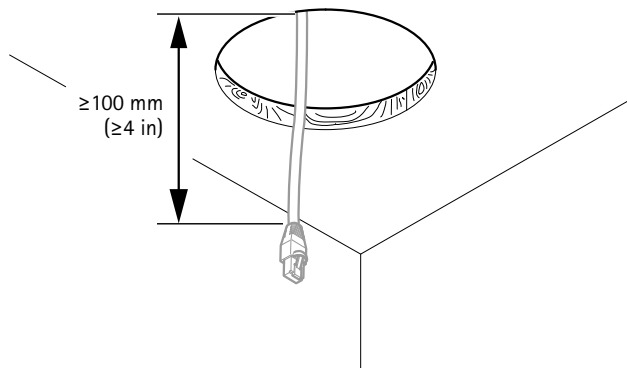

    
1.4

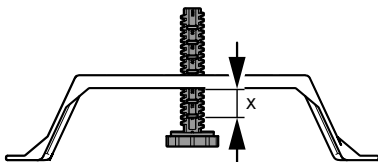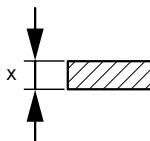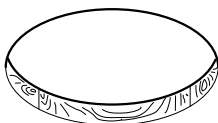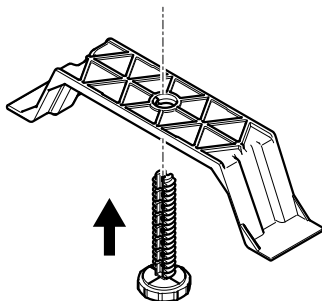


i

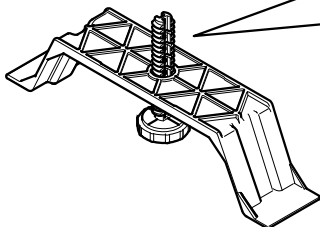  

 
$\geq 10 \text{ mm}$
($\geq 0.4 \text{ in}$)

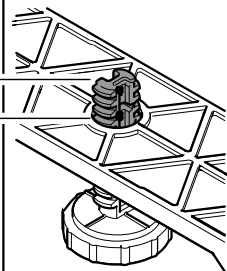

 
1.5

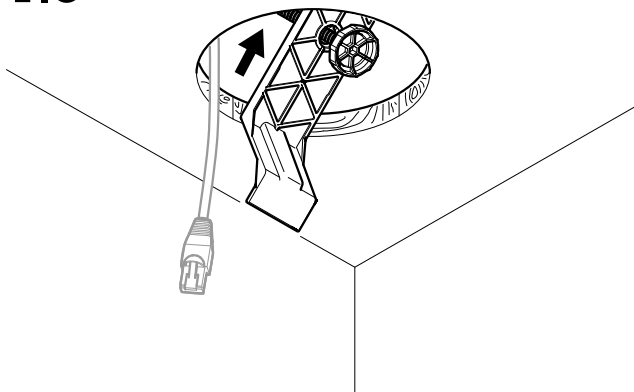

 
1.6

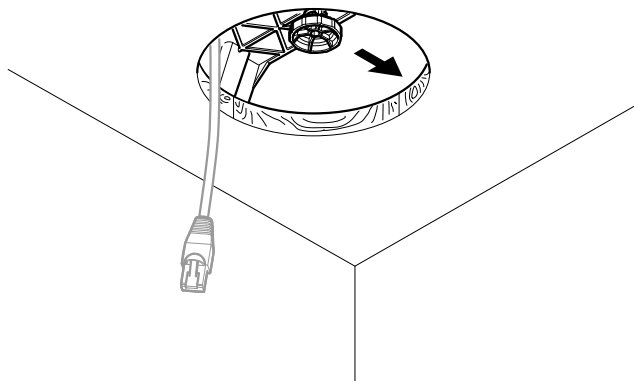

 1.7

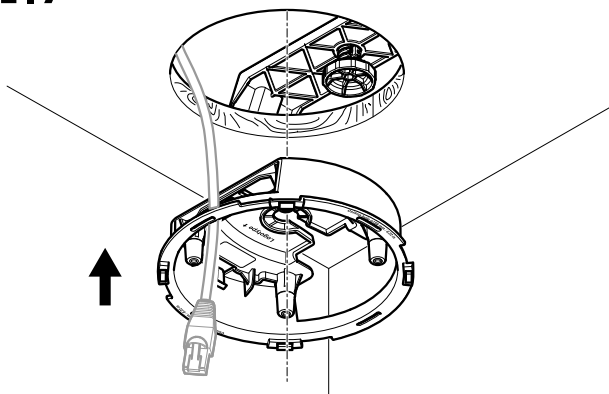


 1.8

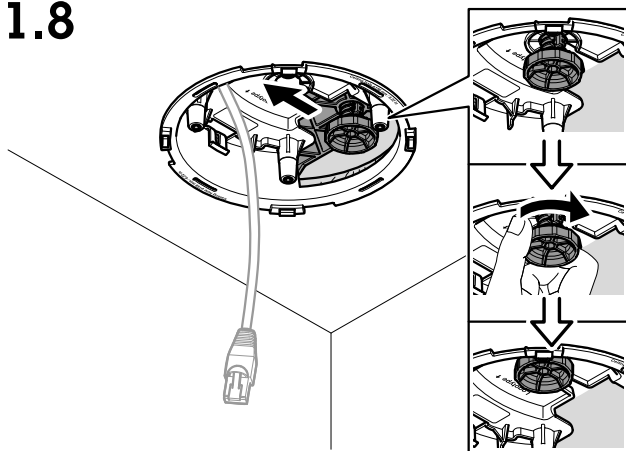

2.1


 
4x  TR20




Installation guide



  
2x

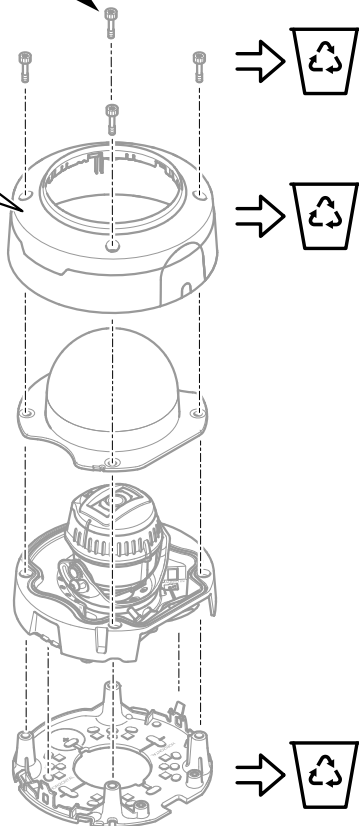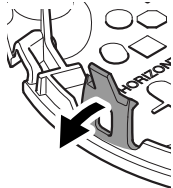


 
2.2

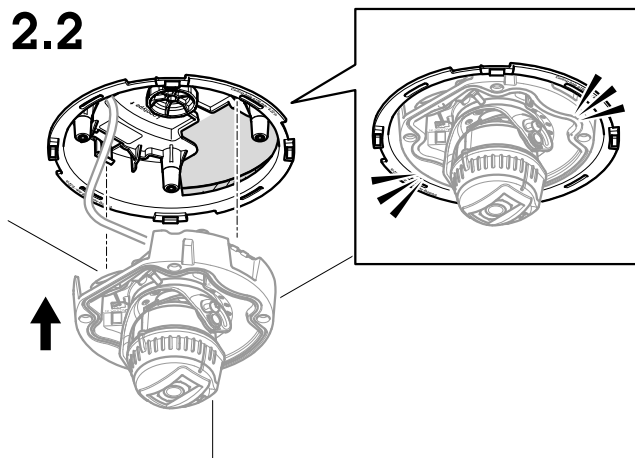

 2.3

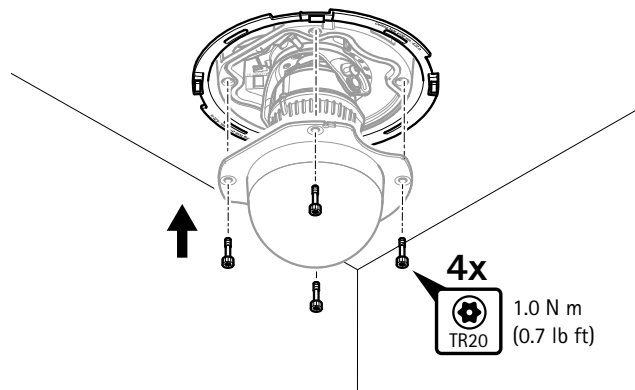

  2.4

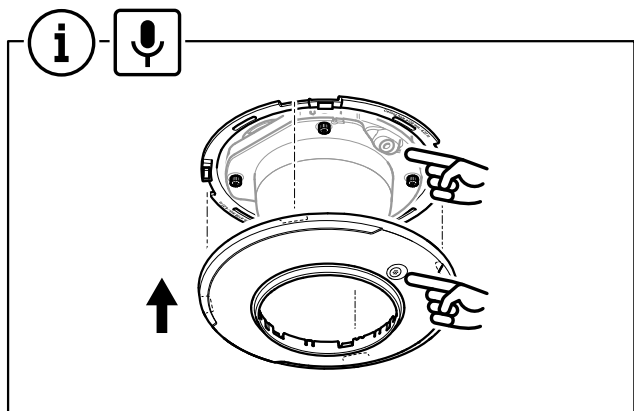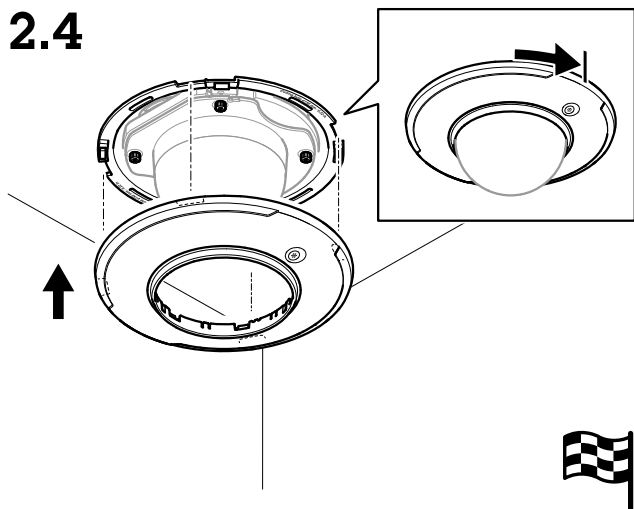



3126187

2025-01 (M1.3)

© 2025 Axis Communications AB