


TV STAND

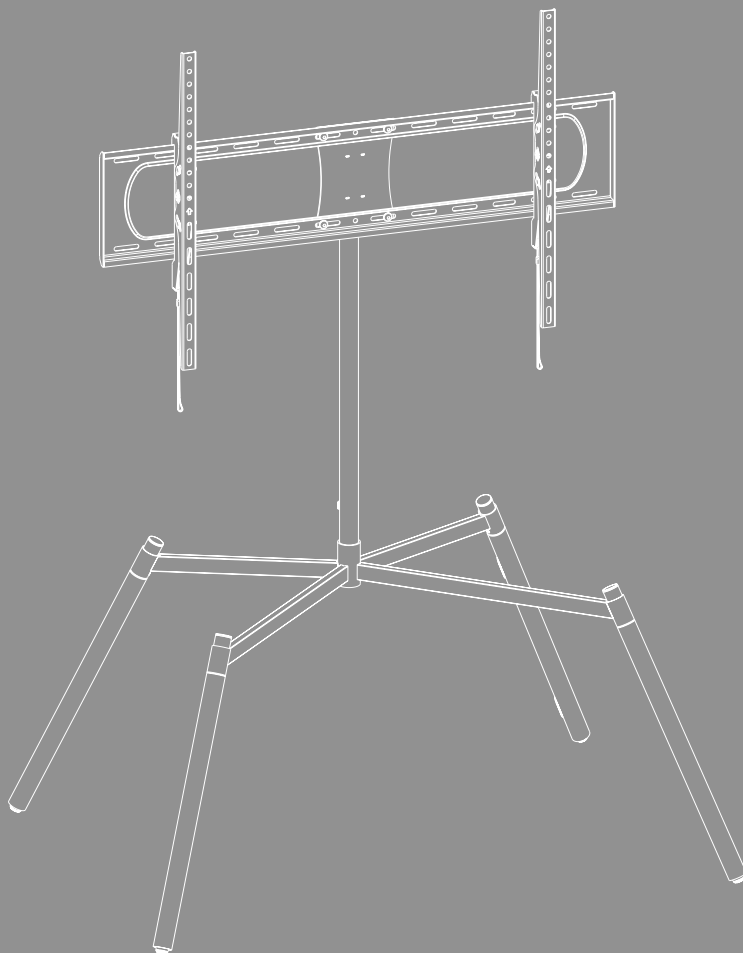



Contents

1. Explanation of warning symbols and notes	3
2. Package contents	4
3. Additionally required tools	5
4. Safety instructions	5
5. Application and specifications	5
6. Preparation and assembly	6
6.1 Assembly preparation	7
6.2 Mounting on the TV set	10
6.3 Mount the VESA arms on the back of the TV set	11
6.4 Mounting the TV set on the TV stand	12
6.5 Mounting the cable management	13
7. Adjustment & maintenance	14
8. Setting options	15
9. Technical data	16
10. Warranty disclaimer	17
11. Service and support	17
12. Warranty conditions	17



GB Operating Instructions

Thank you for choosing a Hama product.

Take your time and read the following instructions and information completely. Please keep these instructions in a safe place for future reference. If you sell the device, pass on the illustrated quick start guide and the safety instructions in printed form to the new owner.

1. Explanation of warning symbols and notes

Warning



This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.

Note



 
This symbol is used to indicate additional information or important notes.




2. Package contents

- TV bracket
- VESA arms (2x)
- Mounting pillar (1x)
- Support legs (4x)
- Connectors (1x)
- Mounting kit
- Safety instructions, illustrated quick start guide

Mounting kit

A1		M8x20 (x1)	D2		M8x20 (x4)
A2		M8x10 (x6)	D3		M8x30 (x4)
A3		M6 (x4)	D4		M8x50 (x4)
A4		M8 (x5)	E1		M4x12 (x4)
B1		M5/M8 (x4)	F1		3 mm (x1)
B2		Ø8x10 (x4)	F2		4 mm (x1)
B3		Ø8x20 (x4)	F3		5 mm (x1)
C1		M6x12 (x4)	G1		(x2)
C2		M6x20 (x4)	G2		(x3)
D1		M8x12 (x4)	G3		(x1)

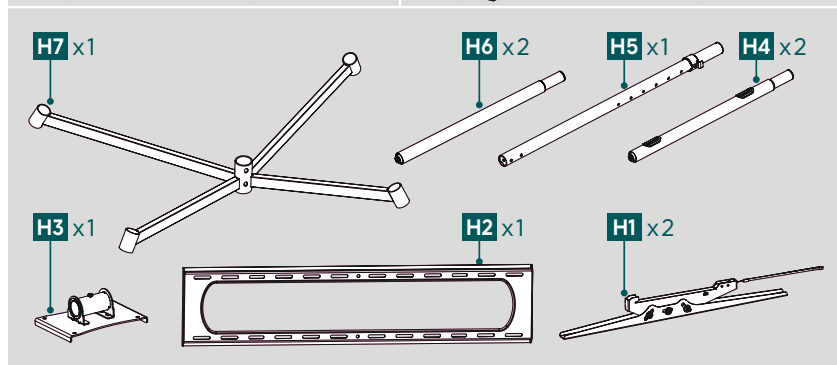

* M8x50 + Ø8x5 = M8x45

Note

Please check the mounting kit for completeness before installing the bracket and ensure that there are no faulty or damaged parts.





3. Additionally required tools



Note



Never install the bracket alone. Seek assistance and help!

4. Safety instructions

Warning



- Given the multitude of terminal devices and wall structures available on the market, the supplied mounting kit is unable to cover every option.
 - It occasionally happens that the screws for attaching the device to the bracket are too long.
 - Read the operating instructions for your terminal device before attempting to mount it. The instructions provide information about the type and measurements of suitable fastening materials.
 - If the supplied mounting kit does not contain suitable fastening materials for mounting the terminal device, purchase these from a specialised dealer.
 - Never apply force during assembly. This can damage your device or the bracket.
 - If in doubt, have this product installed by a qualified technician - do not attempt to install it yourself!
- Once you have mounted the product and the attached load, check that they are sufficiently secure and safe to use.
 - You should repeat this check at regular intervals (at least every three months).
 - Ensure that the product does not exceed its maximum permitted carrying capacity and that no load exceeding the maximum permitted dimensions is attached.
 - Make sure that the product is loaded symmetrically.
 - Maintain the necessary safety clearance around the attached load (depending on the model).
 - In the event of damage to the product, remove the attached load and stop using the product.
 - Do not attach any additional objects to the product.

5. Application and specifications

- The bracket is used for mounting flat screens in private, non-commercial households.
- The bracket is intended only for use inside buildings.
- Use the bracket only for the intended purpose.



6. Preparation and assembly

Note



- Never install the bracket alone. Seek assistance and help!
- Different end devices have different connections for cabling and other devices. Before commencing the installation, check whether the necessary connections can still be reached after mounting.
- Depending on the product and mounting method, you may not need all parts of the mounting kit. It is therefore possible that unneeded screws and other small parts will be left over even after correct mounting. Keep these in a safe place together with these operating instructions for use for later reference (sale of the product, moving house, relocation of the bracket, new TV, etc.).


Warning




- Only set the product up on even, non-slip surfaces with a sufficient load-bearing capacity for the product and the device attached to it.
- Make sure that children do not use the product for climbing.
- Note that the castors of the product can cause pressure marks on the installation surface. This depends on the weight loading and on the stability of the surface at the place of installation.
- Please note that subsequent height adjustment is only possible by dismantling the suspension fitting.




6.1 Assembly preparation

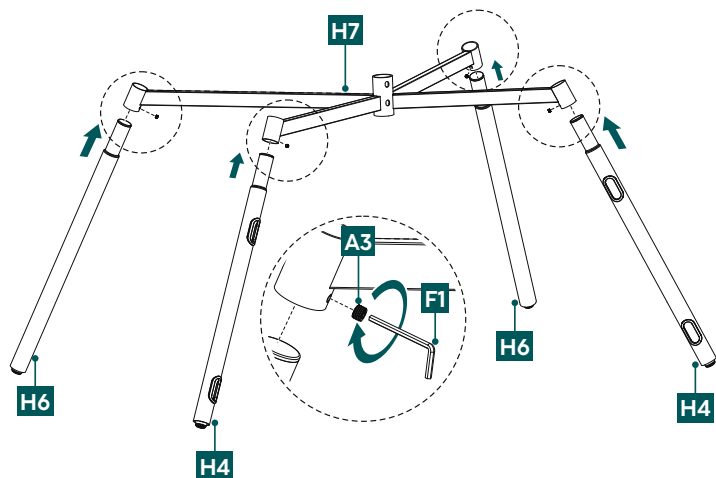


- First connect the four support legs [H6] (2x) and [H4] (2x) with the connector [H7]. Ensure that both [H4] legs with the cable management openings are positioned next to each other and facing outwards towards the rear of the TV.
- Secure the individual parts with a grub screw [A3]. Use the Allen key [F1] to do this.

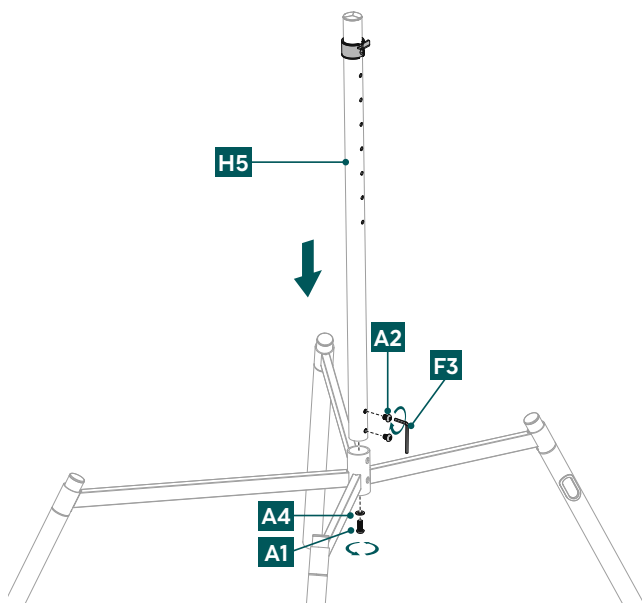


- In the next step, fit the mounting pillar [H5] to the connector [H7].
- Fix the mounting pillar [H5] at the bottom with a washer [A4] and the screw [A1] as shown above. At the front with two screws [A2]. Use the Allen key [F3] to do this.

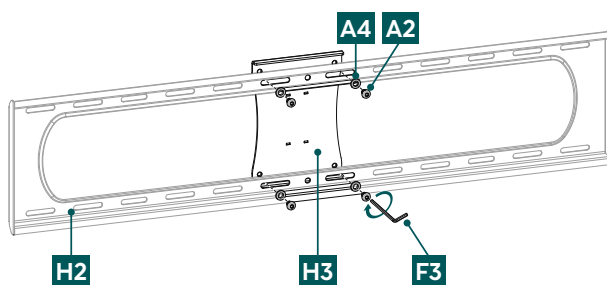

- Attach the connector [H3] to the TV bracket [H2] using the screw [A2] and washer [A4]. Use the Allen key [F3] to do this.

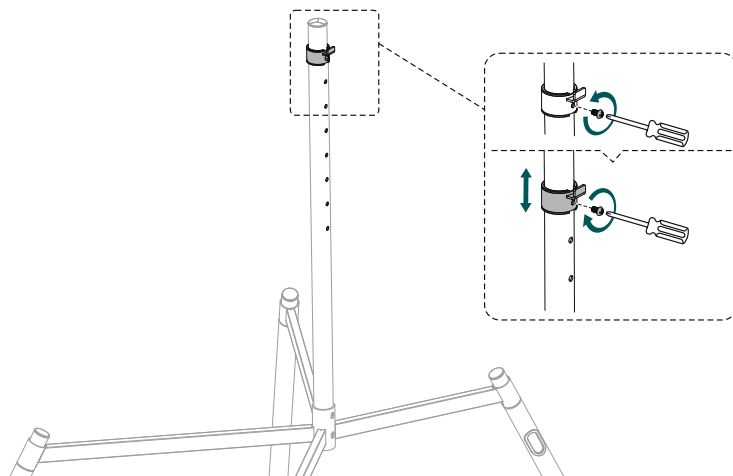

- Use a screwdriver to loosen the locking element as shown above.
- Position the locking element at the desired height, adjusted to the size of your TV, and secure it again using a screwdriver.
- Please note: Be sure to secure the safety element before attaching the TV screen!

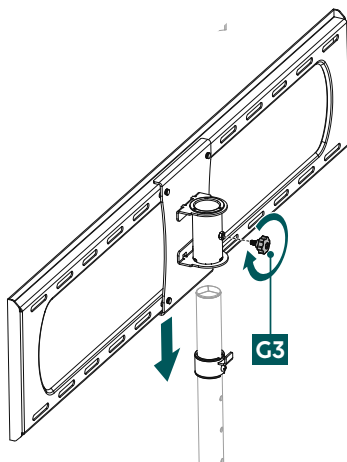


- Place the TV mount on the mounting pillar. Secure it with the handle screw [G3].




6.2 Mounting on the TV set

Note


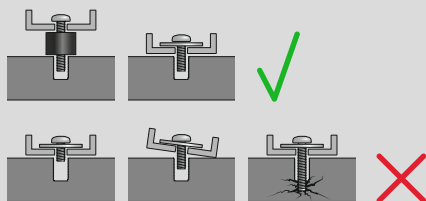


- Given the multitude of terminal devices structures available on the market, we cannot describe all possible mounting options here.
- Please ensure that the bracket lays flat and evenly on the back of the television.
- Use the enclosed spacer to even out any unevenness on the back of the television.
- Ensure that all screws have the proper length and can be mounted until they are hand-tight.



6.3 Mount the VESA arms on the back of the TV set

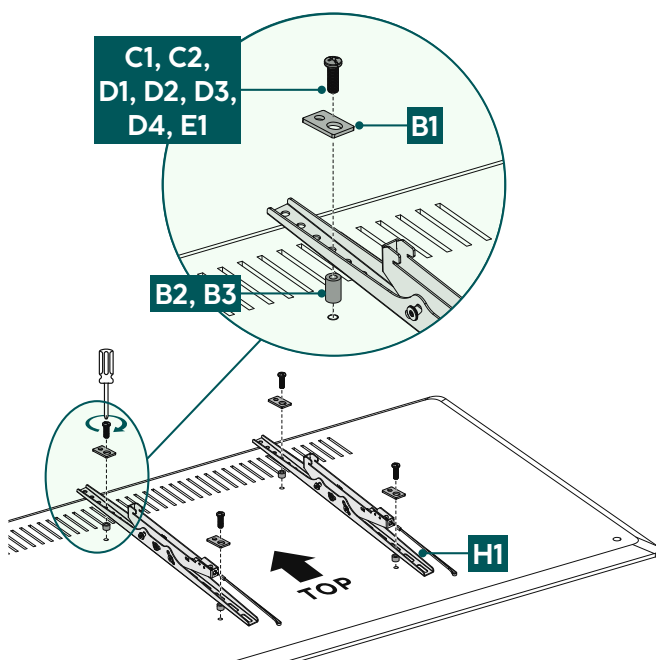

Flat TV back

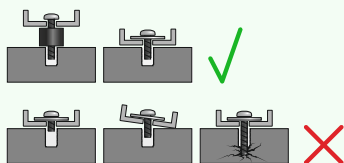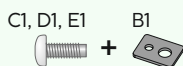

Curved TV back

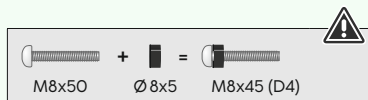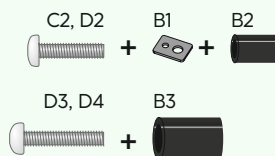


- Mount the VESA arms [H1] to the back of your TV set.
- Ensure that the VESA arms are correctly aligned. The two hooks must point downwards.
- Note the combination of screw, washer and spacer listed above for your flat or curved TV.



6.4 Mounting the TV set on the TV stand


Get support and help from other people for the following assembly step.

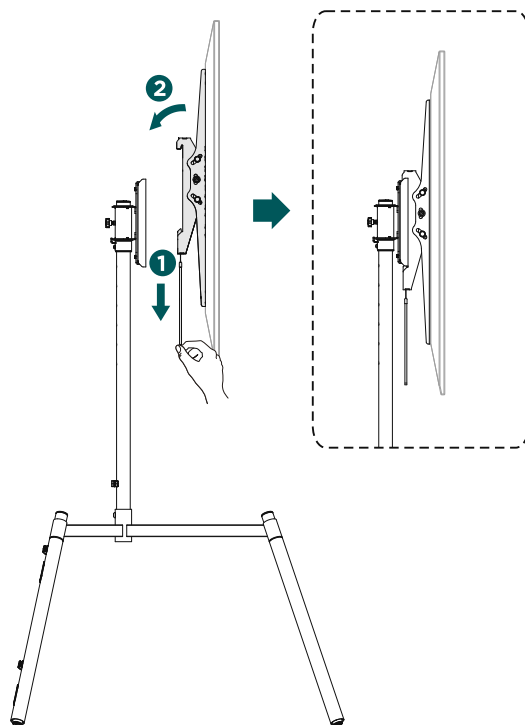

- Hang the TV set with the mounted VESA arms on the TV stand as shown above until it audibly engages.



6.5 Mounting the cable management

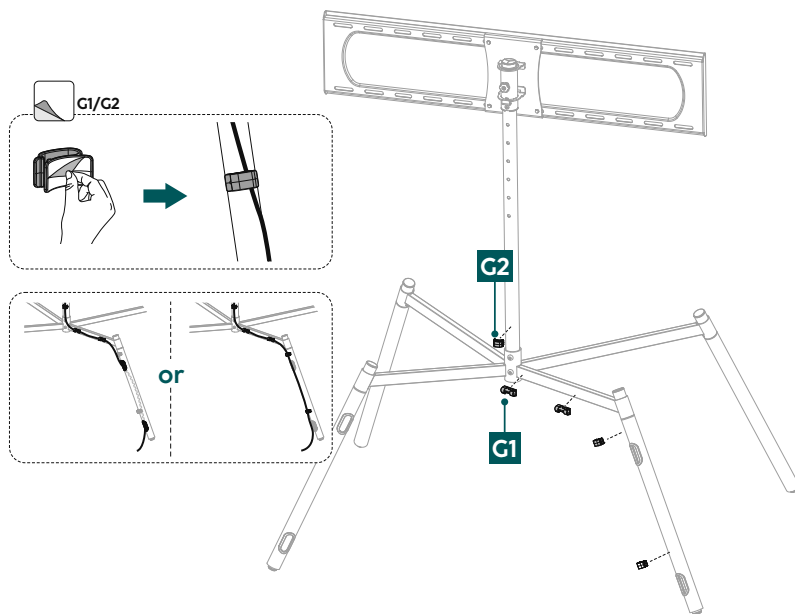

- Attach the supplied cable clips [G1] and [G2] by removing the protective film from the self-adhesive backing, aligning the clips in the desired position and then pressing them firmly into place.
- Use the pre-assembled cable clips to organise the cables after mounting the TV set. You can use only the cable clips or you can route the cables partially through the openings provided on the two rear legs to stow the cables.



7. Adjustment & maintenance

Note



Never adjust the bracket alone. Seek assistance and help!



Note - tiltable / full-motion brackets



- Ensure that no electrical cables are crushed or damaged during installation or adjustment.
 - During adjustment, ensure that the product is loaded symmetrically and that the maximum permitted carrying capacity is not exceeded.
-
- Check the strength and operational safety of the bracket and the load attached to it at regular intervals (at least quarterly).
 - Clean only with water or conventional household cleaners.



8. Setting options

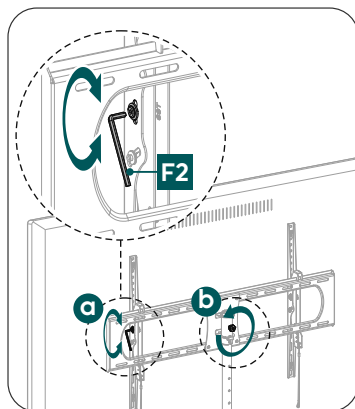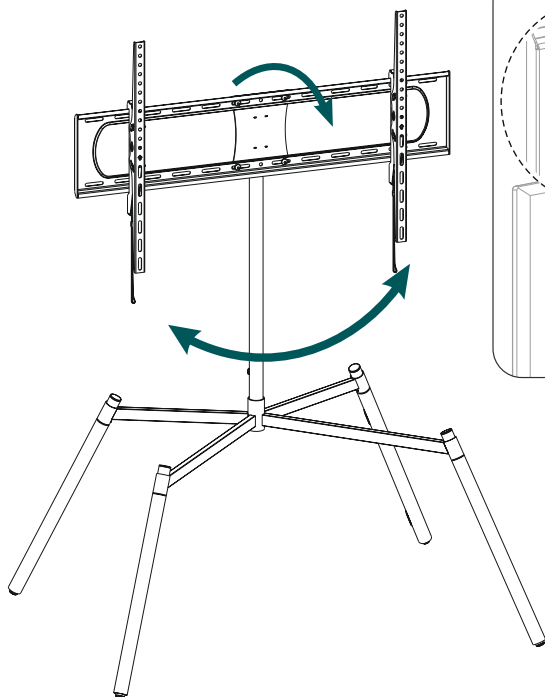

TV 7x
height-adjustable



180°
swivel



-10°/+5°
tilt

The resistance for tilt adjustment and lateral movement can be adjusted using the corresponding screws (a + b).

a To adjust the tilt, loosen the lateral fastening screws, set the desired tilt and re-tighten them (depending on the desired tilt resistance). Use the enclosed Allen key [F2] for this.

b To adjust the swivel, loosen the handle screw slightly, bring the TV into the desired position and tighten the screw again (depending on the desired resistance for the swivelling).



9. Technical data

Maximum load:	50 kg
Screen diagonal:	152.0 - 228.6 cm (US: 60" - 90")
Swivel range:	Up to 180°
Tilt:	-10°/+5° (depending on device)
Width:	117.0 cm
Height:	140.0 cm
Depth:	85.5 cm
Mount:	Compliant with VESA standard: 50 x 50 75 x 75 100 x 100 100 x 150 100 x 200 150 x 150 200 x 100 200 x 200 200 x 300 200 x 400 300 x 200 300 x 300 300 x 400 400 x 200 400 x 300 400 x 400 400 x 600 600 x 200 600 x 300 600 x 400 600 x 600 700 x 400 800 x 400 800 x 500 800 x 600 900 x 600



10. Warranty disclaimer

Hama GmbH & Co KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/or safety notes.

11. Service and support

Please contact Hama Product Consulting if you have any questions about this product.

Hotline: +49 9091 502-0 (German/English)

Further support information can be found here: <https://hama.com>

12. Warranty conditions

For this product, HAMA GmbH & Co KG grants you an extended manufacturer's warranty for freedom from defects, usability, workmanship and the durability of the materials used for a period of 10 years. Excluded from the guarantee is the compatibility of the product with future standards of further developed hardware.

Within the specified period, Hama GmbH & Co KG will remedy a justified warranty claim at its own discretion, free of charge, either by repair or replacement.

The warranty period begins on the date of purchase of this product and is valid throughout the EU.

The warranty granted is in addition to and does not affect your statutory rights. Damage caused by improper use, normal wear and tear, exposure to chemicals or force majeure, as well as tampering or repairs by you or third parties, are excluded from the warranty.

Furthermore, accessories that are not part of the basic equipment of the product (promotional parts) are excluded from the warranty.

In the event of a warranty claim, please contact us at Hama GmbH & Co KG, Dresdner Str. 9, 86653 Monheim, Germany, enclosing proof of purchase. You are also welcome to contact us at www.hama.de or by phone on +49 (0)9091/502-0.