



SENSEO® Liquid Descaler and Padholder

- For SENSEO® Original
- 1 cup padholder
- Liquid descaler bottle

CA6522/01



Sensational freshly brewed coffee!

Descaler and Padholder for your SENSEO® Original

Replace the padholder every 6 months and descale your machine regularly to keep your SENSEO® at its best. SENSEO® descaler removes limescale from your SENSEO® coffee machine so that you can fully enjoy the fresh taste of SENSEO® coffee.

Refresh your SENSEO® machine

- The best formula for easy decalcification
- Renew your SENSEO® by using only Philips

Longer lifetime

- 1 cup padholder for SENSEO® Original
- Liquid descaler and padholder designed for SENSEO®
- Liquid descaler for all SENSEO® machines



* Based on retail sales volumes

Senseo

PHILIPS

Specifications

Country of origin

- Made in: Romania

General specifications

- Suitable for: SENSEO® Original

Technical specifications

- Contents: 1 cup padholder, 1 descaling cycle

Highlights

1 cup padholder

Keep your SENSEO® machine in best conditions by regularly replacing spare parts.

Approved Philips consumables

Make sure to use only approved Philips consumables and original Philips replacement parts

Easy decalcification

Descaling is an important element in SENSEO® maintenance. It should be done at least once every three months, up to six times a year! Keeping your SENSEO® free of scale will ensure you have maximum cup volume, ensure you have maximum coffee temperature, make your SENSEO® produce less sound while brewing, prevent your SENSEO® from malfunctioning, prolong your SENSEO®'s life.

Liquid descaler and padholder

The citric acid used in this liquid descaler will improve descaling performance without damaging your SENSEO®. The Philips padholder gets the right pressure for an excellent coffee taste.

Liquid descaler for all SENSEO

Enjoy your machine for longer if you regularly descale your machine with SENSEO® liquid descaler.