




ENGAGE 65 SE

Technology for life's new rhythm

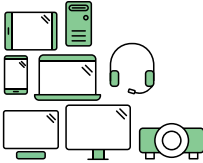

Say hello to a more sustainable product

IT products are associated with a wide range of sustainability risks throughout their life cycle. Human rights violations are common in the factories. Harmful substances are used both in products and their manufacture. Products can often have a short lifespan because of poor ergonomics, low quality and when they are not able to be repaired or upgraded.

This product is a better choice. It meets all the criteria in TCO Certified, the world's most comprehensive sustainability certification for IT products. Thank you for making a responsible product choice, that help drive progress towards a more sustainable future!

Criteria in TCO Certified have a life-cycle perspective and balance environmental and social responsibility. Conformity is verified by independent and approved verifiers that specialize in IT products, social responsibility or other sustainability issues. Verification is done both before and after the certificate is issued, covering the entire validity period. The process also includes ensuring that corrective actions are implemented in all cases of factory non-conformities. And last but not least, to make sure that the certification and independent verification is accurate, both TCO Certified and the verifiers are reviewed regularly.

Want to know more?

Read information about TCO Certified, full criteria documents, news and updates at tcocertified.com. On the website you'll also find our Product Finder, which presents a complete, searchable listing of certified products.

Learn more about sustainability in Jabra at
jabra.com/about/sustainability

© 2024 GN Audio A/S. All rights reserved. Jabra® is a trademark of GN Audio A/S.

Made in China

MODEL: Model: WHB051BS
WHB050HS
WHB051HS



Declaration of Conformity can be found on
www.jabra.com/doc

REV A

1. Welcome.....	6
2. What's in the box.....	7
2.1 Stereo variant	
2.2 Mono variant	
2.3 Convertible variant	
2.4 Optional accessories	
3. How to wear.....	11
3.1 Stereo/Mono headset	
3.2 Convertible headset	
3.3 How to change the convertible headset EarGel	
3.4 How to adjust the convertible headset Ear-Hook	
3.5 How to change the convertible headset wearing style	
4. First time use	16
4.1 Connect to a desk phone with headset port	
4.2 Connect to a desk phone without a headset port	
4.3 Dock and charge the headset	
4.4 Connect the headset directly to a computer	
5. Base overview.....	21
5.1 Base status LEDs	
5.2 How to adjust the microphone volume for desk phone calls	
5.3 How to find a dial tone for desk phones	

6. Jabra Direct.....	25
6.1 Firmware update	
7. How to use	26
7.1 Stereo/Mono headset overview	
7.2 Convertible headset overview	
7.3 Status LEDs	
7.4 Basic call usage	
7.5 Merge calls	
7.6 Conference calls	
7.7 Transfer a call from desk phone to headset	
7.8 Transfer a call from headset to desk phone	
7.9 Multiple call handling	
7.10 How to change voice notification language	
7.11 How to add a new primary headset	
7.12 How to reset	
8. How to change settings.....	41
9. Support.....	43
9.1 FAQ	
9.2 How to care for your device	
9.3 Replacement accessories	

1. Welcome

Thank you for using the Jabra Engage 65 SE.
We hope you will enjoy it!


Jabra Engage 65 SE features

- **Flexible connectivity**
Connect to desk phone and computer
- **World's lightest DECT headset**
18 grams (convertible)
- **Avoid disturbances**
Built-in Busylight
- **Use all day long**
Up to 13 hours talk time (stereo/mono)
Up to 9 hours talk time (convertible)
- **Take calls anywhere in the office**
Up to 150 meters/490 feet range
(stereo/mono)
Up to 100 meters/325 feet range
(convertible)
- **Secure confidential calls**
DECT AES 256 bit encryption


2. What's in the box

The Jabra Engage 65 SE comes with one of three different headset styles: stereo, mono, and convertible.

2.1 Stereo variant

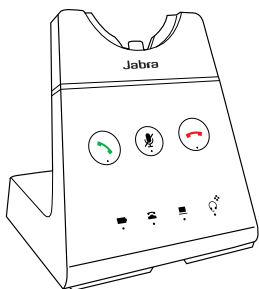

Base

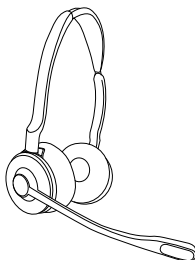


Stereo
headset



Power supply




USB-C cable




Telephone
cable

2.2 Mono variant

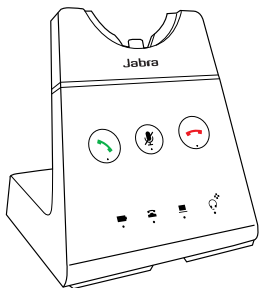

Base

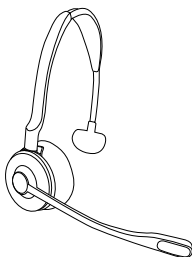


Mono
headset



Power supply




USB-C cable




Telephone
cable


2.3 Convertible variant

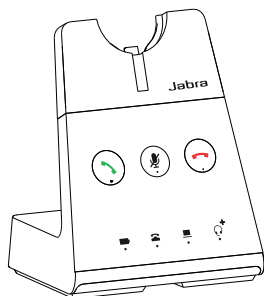

Base

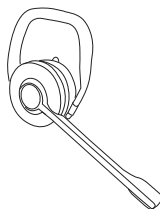


Convertible headset

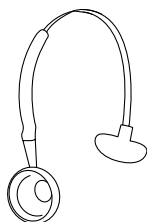

Headband



EarHook

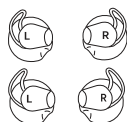


EarGels



Power supply



USB-C cable




Telephone cable


2.4 Optional accessories

Optional accessories are available at jabra.com/accessories

Neckband for Mono headset

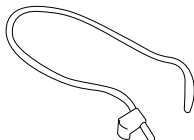


Neckband for Convertible headset

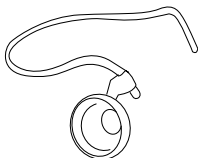

GN1000 handset lifter




Jabra EHS adapter



3. How to wear


3.1 Stereo/Mono headset

The headset can be worn with the microphone on the left or the right.

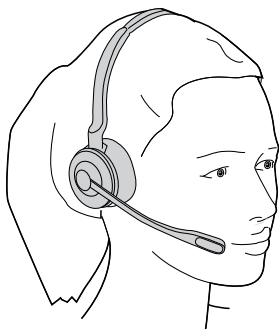


3.2 Convertible headset


The headset can be worn on the left or the right ear.

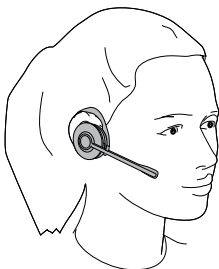


3.3 How to change the convertible headset EarGel



R

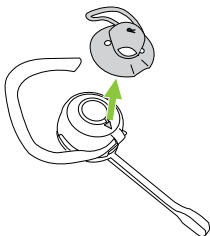


L

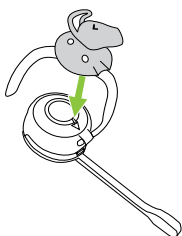


3.4 How to adjust the convertible headset EarHook


1. Adjust the EarHook to fit your specific ear shape.

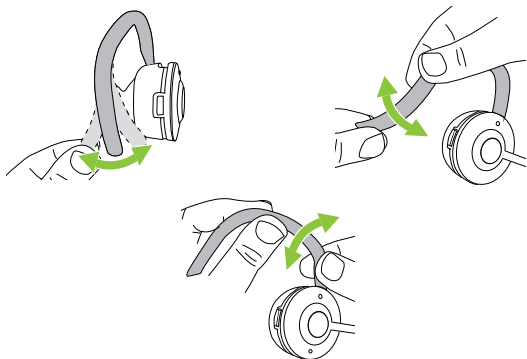


2. Place the headset on your ear.

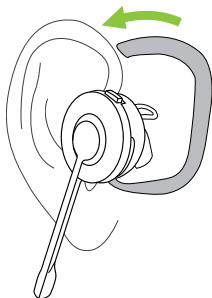


3. Point the microphone towards your mouth.

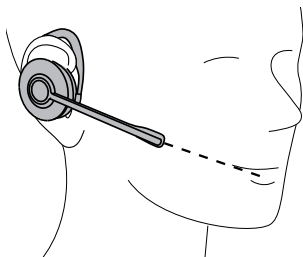

4. Ensure the EarHook is fitted to the back of your ear without a gap. Adjust the EarHook if necessary.


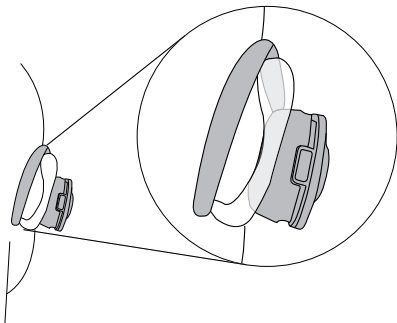


3.5 How to change the convertible headset wearing style

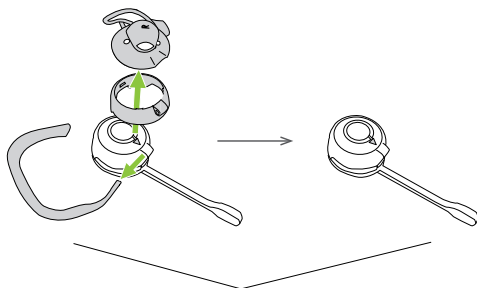

Headband

Neckband

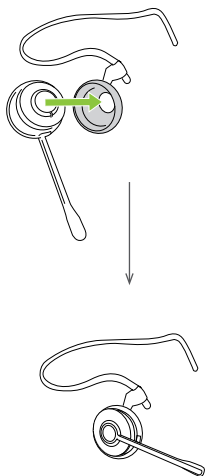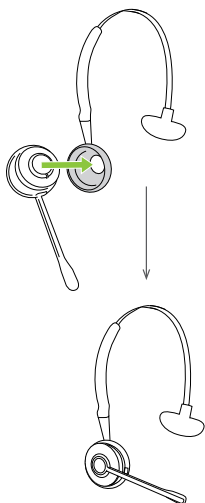

4. First time use

Connect phone and computer cables



Connect to power



Dock and charge the headset



Make a test call to the connected phone




Wear the headset




Answer the call on your phone

Your Engage is now ready for use

4.2 Connect to a desk phone without a headset port

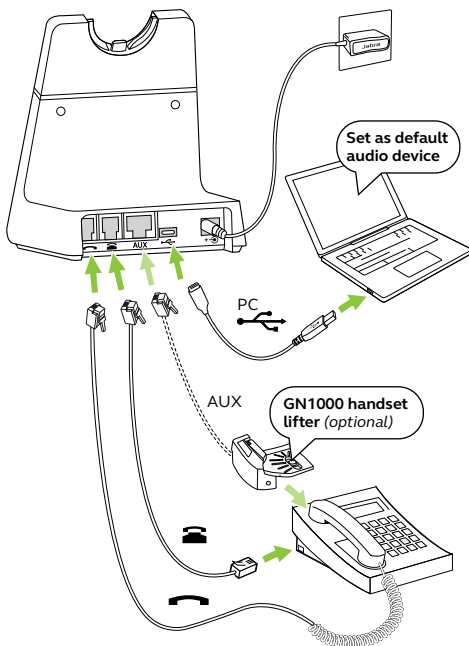

4.3 Dock and charge the headset

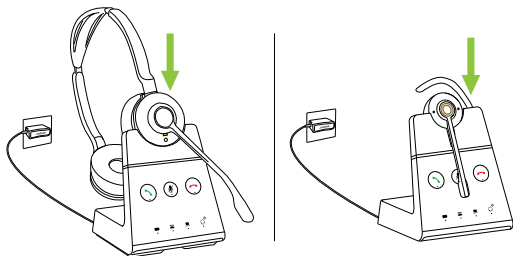


The headset will charge whenever it is docked in a base that is connected to a power supply. The status LED on the headset and the battery icon on the base will pulse to indicate the headset is charging.

The stereo/mono headsets have up to 13 hours of battery, and the convertible headset has up to 9 hours of battery.


All headsets take approx. 1.5 hours to fast charge to full. 40% of the battery will charge in approx. 30 minutes.

4.4 Connect the headset directly to a computer

1. Plug the supplied USB-C cable into an available USB port on your computer.

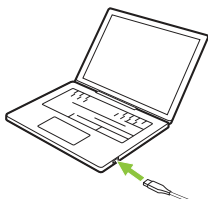


2. Press and hold the **Volume up** button on the headset while at simultaneously plugging the USB-C cable into the headset. Once the LED on the headset stops flashing green, release the button.

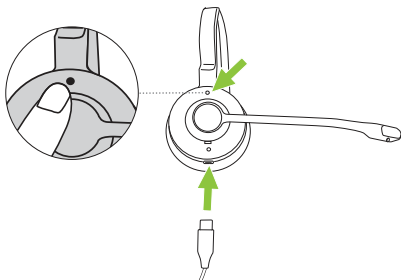


3. The headset can now be selected as an audio playback device on the computer. When the headset is connected with the USB cable, call controls and the busylight on the headset are not supported.


5. Base overview

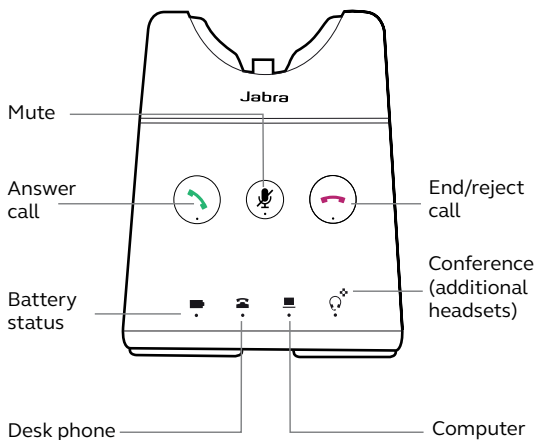

5.1 Base status LEDs

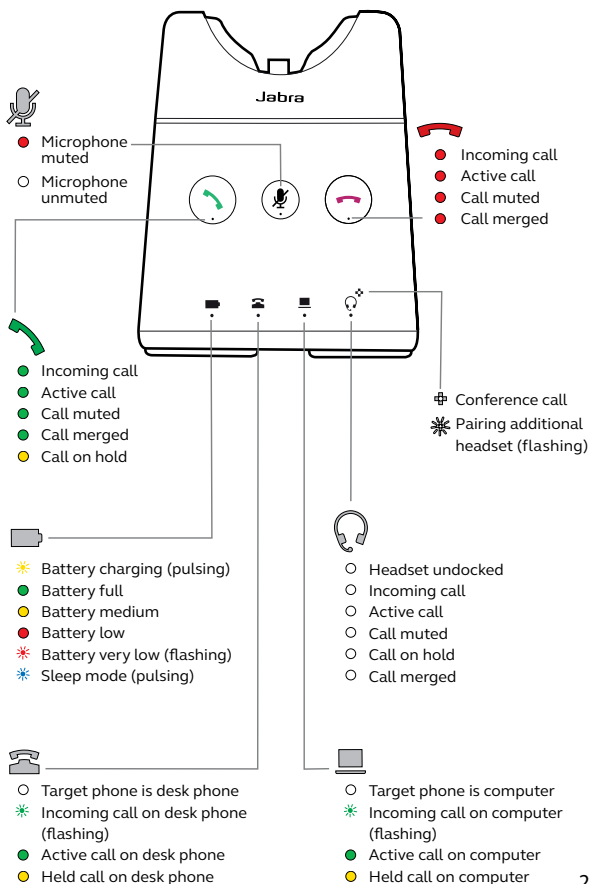


5.2 How to adjust the microphone volume for desk phone calls

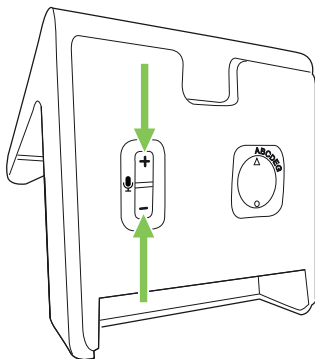

To adjust the desk phone microphone volume, press **+** or **-** buttons, located on the bottom of the base.

5.3 How to find a dial tone for desk phones

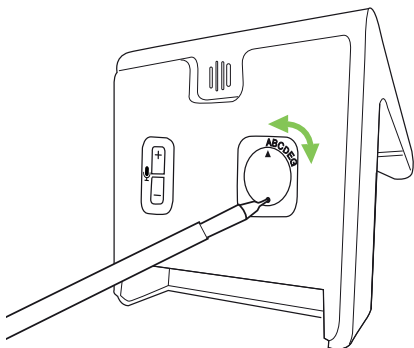

If you cannot hear a dial tone in your desk phone, it may be necessary to adjust the dial tone switch to a different setting.

The dial tone switch is located on the bottom of the base. Use a pointed object to rotate the switch between the different settings, until you do hear a dial tone in the headset. The default setting is A.

6. Jabra Direct

Jabra Direct is computer software designed to support, manage, and enable optimal functionality for your Jabra devices.




Download via jabra.com/direct

6.1 Firmware update


Jabra Direct will notify you when there is a firmware update available.

7. How to use

7.1 Stereo/Mono headset overview

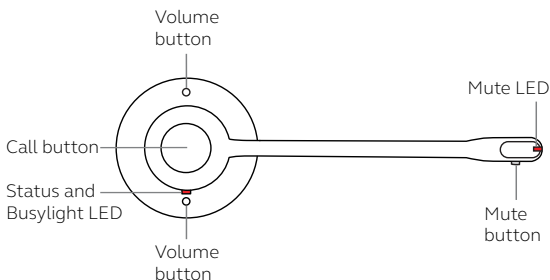


7.2 Convertible headset overview

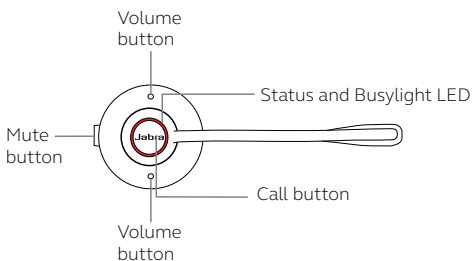


7.3 Status LEDs

Stereo/Mono variant

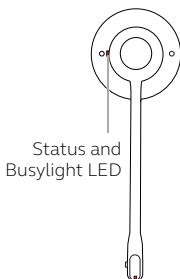






Convertible variant

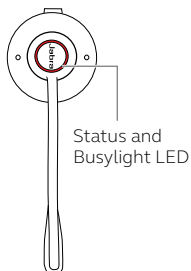

- Busylight
- ⊙ Incoming call
- ⊙ Headset powering on
- ⊙ Headset powering off
- Headset fully charged
- ⊙ Headset charging
- ⊙ Firmware updating
- ⊙ DECT pairing
- DECT connected

7.4 Basic call usage

		Function	Action
	Power on		Press the Call button on the headset, or undock the headset from the base
	Power off		Hold the Call button for 5 seconds
	Answer call		Press the Call button, undock the headset, or tap  on the base
	End call		Press the Call button, dock the headset, or tap  on the base
	Reject call		Double-press the Call button, or tap  on the base
	Switch target phone		Undock the headset and hold the Call button for 1 second Alternatively, hold  on the base for 1 second

	Adjust volume	Press the Volume buttons. The convertible headset uses a motion sensor to detect which button is volume up and which is volume down, depending on the headset orientation
	Toggle Busylight	Press both Volume buttons at the same time
	Access the Voice-guided settings menu	Hold (3 secs) both Volume buttons at the same time
	Mute/un-mute microphone	Press the Mute button (stereo/mono headset) By default, the mute LED lights up red when muted.
	Mute/un-mute microphone	Press the Mute button (convertible headset)

7.5 Merge calls

It is possible to merge an incoming call with a current call.

To merge calls:

1. Hold the **Call** button (2 secs) on the headset, or press  on the base to accept the incoming call. This will place the current call on hold.
2. Hold  (2 secs) to merge the calls.


To unmerge the calls, hold  (2 secs) on the base.

To end the merged call, dock the headset or press the **Call** button on the headset.

7.6 Conference calls

Add headset(s) to a conference call

Up to three additional headsets can be connected to one base for conferencing. The primary headset must be in a call state to conference additional headsets.

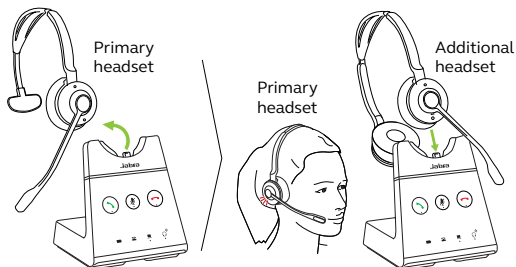

1. Undock the primary headset.
2. Dock an additional headset in the base. It will attempt to pair to the base.
3. A voice notification will play in the primary headset. Press the **Call** button on the primary headset to accept the additional headset to the conference. The audio will now be shared between headsets.

By default, the additional headset will be muted.

Note: It is possible to use any Jabra Engage SE DECT headsets that can be docked in the base for conference calls.

Add headset(s) to a conference call without docking

Up to three additional headsets can be connected to one base, without the need to dock the headsets. The primary headset must be in a call state to conference additional headsets.

1. Undock the primary headset.
2. Power off the additional headset by holding the **Call** button for 4 seconds.
3. Hold  (3 secs) on the base. The conference LED on the base will flash.
4. Put the additional headset into pairing mode by holding the **Call** button for 5 seconds until the status LED on the headset flashes blue.
5. A voice notification will play in the primary headset. Press the **Call** button on the primary headset to accept the additional headset to the conference. The audio will now be shared between headsets.

By default, the additional headset will be muted. To unmute any additional headsets, press the **Mute** button on the headset.

Note: It is possible to use any Jabra Engage SE DECT headsets that can be docked in the base for conference calls.

End or leave a conference call

To end the call for all headsets, press the **Call** button on the primary headset, or dock the primary headset in the base.


Additional headsets can leave the conference by pressing the **Call** button on the headset, or by docking the additional headset in the primary headset's base (not the additional headset's base). The conference call will continue for all other headsets.

Permanent conference mode

By default, the conference will end automatically for all additional headsets when the call ends.

It is possible to continue the conference with the additional headsets until the primary headset is docked, by changing this setting in Jabra Direct.

7.7 Transfer a call from desk phone to headset

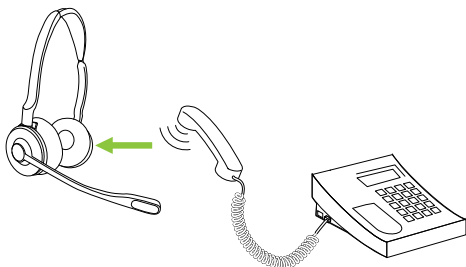


To transfer a call:

1. Select the desk phone as the target phone on the base.
2. Lift the headset from the base, or tap the **Call** button on the headset. The call audio will transfer from the desk phone handset to the headset. If necessary, press the headset button on the desk phone and do not hang up the handset until the call is finished.

Do not hang up the desk phone handset until the call is finished.

7.8 Transfer a call from headset to desk phone

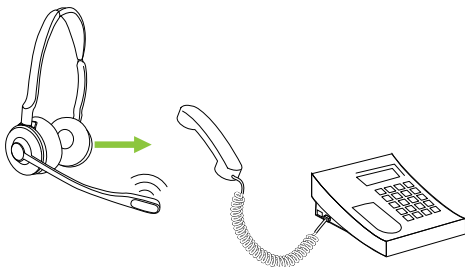

To transfer a call from the headset to a desk phone, lift the desk phone handset and then dock the headset in the base.

The call audio will transfer from the headset to the desk phone if the base is plugged into the handset port on the desk phone, otherwise press the headset button on the desk phone.

7.9 Multiple call handling

The headset and base can accept and handle multiple calls at the same time.

Multiple call handling

Answer incoming call and put current call on hold

Tap  on the base

Switch between held call and active call

Tap  on the base

Reject incoming call, while on a current call

Tap  on the base

7.10 How to change voice notification language

There are 5 available languages for the headset voice notifications: English, German, French, Japanese, and Spanish.

To change language:

1. When not on a call, hold both **Volume** buttons (3 secs) on the headset to access the voice-guided settings menu. The first available setting is the voice notification language.
2. Press the **Volume** buttons to cycle through the available languages.
3. Press the **Call** button to accept the language.
4. Hold both volume buttons (3 secs) on the headset to exit the voice-guided settings menu. The base will reboot and the new setting will be saved.

The language can also be changed using Jabra Direct.

7.11 How to add a new primary headset

It is only possible to have one primary headset for each base. Adding a new primary headset replaces the current primary headset.

There are three methods for adding a new primary headset to the base:


A) If the current primary headset is not within range of the base or is turned off, simply dock the new headset in the base. It will become the primary headset. The conference and headset status LED on the base will flash to indicate the new headset is now the primary headset.

B) If the current primary headset is within range of the base and is turned on, and the base is not on a call, dock the new headset in the base and hold the **Call** button (1 sec) on the headset until the conference and headset status LED on the base flashes, indicating that it is now the primary headset.

C) If **Easy pairing** has been enabled in Jabra Direct, and the current primary headset is not on a call, simply dock the new headset in the base. It will become the primary headset. The conference and headset status LED on the base will flash to indicate the new headset is now the primary headset.

7.12 How to reset

Resetting the headset and the base resets all settings.

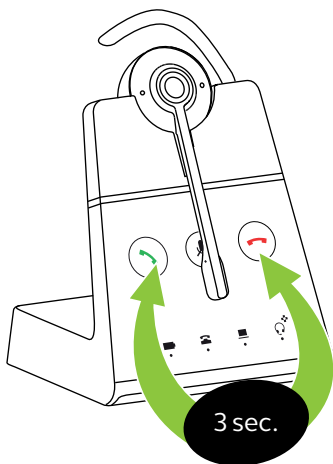

To reset:

1. Dock the headset in the base.
2. Simultaneously press and hold the **Answer call** button and the **End call** button on the base for 3 seconds. The headset and base will reboot and all settings will return to their default values.

The base and headset can also be reset using Jabra Direct.

8. How to change settings

Headset and phone settings can be changed using the voice-guided settings menu.

Alternatively, all settings can be changed using Jabra Direct on your computer. Download Jabra Direct at jabra.com/direct.

Menu Navigation



Access the
Voice-guided
settings menu


Hold (3 sec) both the
Volume up and the
Volume down button at
the same time

Cycle through
setting options

Press the **Volume up** or the
Volume down button

Exit the
Voice-guided
settings menu

Hold (2 sec) both the
Volume up and the
Volume down button at
the same time



Accept setting
option

Press the **Call** button to
accept the announced
setting option. You will
cycle to the next setting

Settings

Voice notification language	Select the headset voice language from a list of 5 languages
-----------------------------	--

Voice notifications	Select to enable voice notifications
---------------------	--------------------------------------

Mute reminder tone	Select to use a periodic audio reminder when the microphone is muted
--------------------	--

Desk phone ringtone	Select a ringtone for desk phones
---------------------	-----------------------------------

Desk phone ringtone volume	Select the ringtone volume for desk phones
----------------------------	--

Softphone ringtone	Select a ringtone for softphones
--------------------	----------------------------------

Softphone ringtone volume	Select the ringtone volume for softphones
---------------------------	---

Range or density	Select if the base should be optimized for improved range, or improved density
------------------	--

Hook lifter type	Select the hook lifter type
------------------	-----------------------------

Default phone	Select which phone type is the default
---------------	--

9. Support

9.1 FAQ

View the FAQs at jabra.com/support.

9.2 How to care for your device

- It is recommended to keep the headset between -5°C and 45°C (23°F and 113°F).
- Do not store the headset for extended periods of time without recharging the battery (max. three months).
- If the headset or base becomes dirty, it is recommended to clean them with a soft, lint-free cloth that has been dampened with clean water.

9.3 Replacement accessories

Replacement or additional accessories can be purchased online at jabra.com/accessories.