

5/8-Port 10/100/1000Mbps
Industrial Gigabit Ethernet Switch

IGS-501 / IGS-801 / IGS-501T / IGS-801T

User's Manual

Trademarks

Copyright © PLANET Technology Corp. 2012.

Contents subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp. All other trademarks belong to their respective owners.

Disclaimer

PLANET Technology does not warrant that the hardware will work properly in all environments and applications, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose.

PLANET has made every effort to ensure that this User's Manual is accurate; PLANET disclaims liability for any inaccuracies or omissions that may have occurred.

Information in this User's Manual is subject to change without notice and does not represent a commitment on the part of PLANET. PLANET assumes no responsibility for any inaccuracies that may be contained in this User's Manual. PLANET makes no commitment to update or keep current the information in this User's Manual, and reserves the right to make improvements to this User's Manual and/or to the products described in this User's Manual, at any time without notice.

If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the Instruction manual, may cause harmful interference to radio

communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Revision

PLANET 5/8-Port 10/100/1000Mbps Industrial Gigabit Ethernet Switch
User's Manual

FOR MODELS: IGS-501 / IGS-801/ IGS-501T / IGS-801T

REVISION: 2.0 (JUNE, 2012)

PART NO: EM-IGS-501_801_v2.0 (2350-AH0100-001)

Table Of Contents

1. INTRODUCTION	5
1.1 Package Contents	5
1.2 How to Use This Manual.....	5
1.3 Product Features.....	6
1.4 Product Specifications	7
2. INSTALLATION	9
2.1 Product Description	9
2.1.1 Product Overview.....	10
2.1.2 Switch Front Panel	10
2.1.3 LED Indicators	11
2.1.4 Switch Upper Panel	12
2.1.5 Wiring the Power Inputs	12
2.1.6 Wiring the Fault Alarm Contact.....	13
2.2 Mounting Installation.....	14
2.2.1 DIN-Rail Mounting.....	14
2.2.2 Wall Mount Plate Mounting.....	16
3. APPLICATION	17
4. SWITCH OPERATION.....	19
4.1 Address Table.....	19
4.2 Learning	19
4.3 Forwarding & Filtering	19
4.4 Store-and-Forward	20
4.5 Auto-Negotiation.....	20
5. TROUBLESHOOTING	21
APPENDIX A: NETWORKING CONNECTION	22
A.1 Switch's RJ-45 Pin Assignments	22
A.2 RJ-45 Cable Pin Assignments.....	23

1. INTRODUCTION

1.1 Package Contents

Check the contents of your package for following parts:

- Industrial Gigabit Ethernet Switch x 1
- User's Manual x 1
- DIN Rail Kit x 1
- Wall Mount Kit x 1

If any of these are missing or damaged, please contact your dealer immediately, if possible, retain the carton including the original packing material, and use them against to repack the product in case there is a need to return it to us for repair.

1.2 How to Use This Manual

This Industrial Gigabit Ethernet Switch User Manual is structured as follows:

Chapter 2 Installation

The chapter explains the feature, functionality and the physical installation of the Industrial Gigabit Ethernet Switch.

Chapter 3 Application

The chapter explains the Industrial Gigabit Ethernet Switch application.

Chapter 4 Switch operation

The chapter explains the Industrial Gigabit Ethernet Switch transmit operation.

Chapter 5 Troubleshooting

The chapter explains the troubleshooting of the Industrial Gigabit Ethernet Switch.

Appendix A

This chapter contains cable information of the Industrial Gigabit Ethernet Switch.

1.3 Product Features

Physical Port

- 5-Port 10/100/1000Base-T RJ-45 with auto MDI/MDI-X function (IGS-501 / IGS-501T)
- 8-Port 10/100/1000Base-T RJ-45 with auto MDI/MDI-X function (IGS-801 / IGS-801T)

Layer 2 Features

- Complies with IEEE 802.3 10Base-T, IEEE 802.3u 100Base-TX, IEEE 802.3ab 1000Base-T Ethernet standard
- Supports Auto-negotiation and 10/100Mbps half / full duplex and 1000Mbps full duplex mode
- High performance Store and Forward architecture, broadcast storm control, runt/CRC filtering eliminates erroneous packets to optimize the network bandwidth
- Prevents packet loss with back pressure (Half-Duplex) and IEEE 802.3x PAUSE frame flow control (Full-Duplex)
- Backplane (Switching Fabric): IGS-501 / IGS-501T: 10Gbps, IGS-801 / IGS-801T: 16Gbps
- Integrated address look-up engine, support 8K absolute MAC addresses on IGS-501 / IGS-801 / IGS-801T
- Integrated address look-up engine, support 2K absolute MAC addresses on IGS-501T
- 136 kilobytes on-chip frame buffer on IGS-501, 1M Bits on-chip buffer memory on IGS-501T
- 176 kilobytes on-chip frame buffer on IGS-801 / IGS-801T
- 9K Jumbo packet size support
- Automatic address learning and address aging
- CSMA/CD Protocol

Industrial Case / Installation

- IP-30 Metal case / Protection
- DIN Rail and Wall Mount Design
- 12 to 48V DC, redundant power with polarity reverse protect function and connective removable terminal block for master and slave power, AC 24V power support
- -10 to 60 Degree C operation temperature on IGT-501 / IGT-801
- -40 to 75 Degree C operation temperature on IGT-501T / IGT-801T

1.4 Product Specifications

Model	IGS-501	IGS-801
Hardware Specification		
10/100/1000Base-T Ports	5	8
Dimensions (W x D x H)	135mm x 87mm x 32mm	
Weight	455g	473g
Power Requirement	12~48V DC, Redundant power with polarity reverse protection function, AC 24V power support	
Power Consumption / Dissipation	11.9 Watts / 40BTU	13.2 Watts / 45BTU
Installation	DIN rail kit and wall mount ear	
Switch Specification		
Switch Processing Scheme	Store-and-Forward	
Address Table	8K entries	
Buffer	136 kilobytes	176 kilobytes
Flow Control	Back pressure for half duplex, IEEE 802.3x Pause Frame for full duplex	
Switch fabric	10Gbps	16Gbps
Throughput (packet per second)	7.4Mpps	11.9Mpps
Jumbo Frame	9K	
Network cables	10/100/1000Base-T: Cat. 3, 4, 5, 5e, 6 UTP cable (100meters, max.) EIA/TIA-568 100-ohm STP (100meters, max.)	
Standards Conformance		
Standards Compliance	IEEE 802.3 Ethernet IEEE 802.3u Fast Ethernet IEEE 802.3ab Gigabit Ethernet IEEE 802.3x Full-Duplex Flow control	
Temperature	Operating: -10~60 Degree C Storage: -20~70 Degree C	
Humidity Operating	Operating: 5% to 95%, Storage: 5% to 95% (Non-condensing)	
Regulation Compliance	FCC Part 15 Class A, CE	

Model	IGS-501T	IGS-801T
Hardware Specification		
10/100/1000Base-T Ports	5	8
Dimensions (W x D x H)	135mm x 87mm x 32mm	
Weight	498g	473g
Power Requirement	12~48V DC, Redundant power with polarity reverse protection function, AC 24V power support	
Power Consumption / Dissipation	5.28 Watts / 18BTU	13.2 Watts / 45BTU
Installation	DIN rail kit and wall mount ear	
Switch Specification		
Switch Processing Scheme	Store-and-Forward	
Address Table	2K	8K
Buffer	1M Bits	176 kilobytes
Flow Control	Back pressure for half duplex, IEEE 802.3x Pause Frame for full duplex	
Switch fabric	10Gbps	16Gbps
Throughput (packet per second)	7.4Mpps	11.9Mpps
Jumbo Frame	9K	
Network cables	10/100/1000Base-T: Cat. 3, 4, 5, 5e, 6 UTP cable (100meters, max.) EIA/TIA-568 100-ohm STP (100meters, max.)	
Standards Conformance		
Standards Compliance	IEEE 802.3 Ethernet IEEE 802.3u Fast Ethernet IEEE 802.3ab Gigabit Ethernet IEEE 802.3x Full-Duplex Flow control	
Temperature	Operating: -40~75 Degree C Storage: -40~75 Degree C	
Humidity Operating	Operating: 5% to 95%, Storage: 5% to 95% (Non-condensing)	
Regulation Compliance	FCC Part 15 Class A, CE	

2. INSTALLATION

This section describes the functionalities of the Industrial Gigabit Ethernet Switch's components and guides how to install it on the desktop. Basic knowledge of networking is assumed. Please read this chapter completely before continuing.

In the following section, the term "Industrial Gigabit Ethernet Switch" means the IGT-501 / IGT-801 / IGT-501T / IGT-801T.

2.1 Product Description

The PLANET IGT-501 / IGT-801 / IGT-501T / IGT-801T is 5/8-Port 10/100/1000Mbps Industrial Gigabit Ethernet Switch with non-blocking wire-speed performance and new slim type with IP 30 metal shape for easily deployment in Heavy Industrial demanding environments.

With a 10/16Gbps internal switching fabric, the Industrial Gigabit Ethernet Switch can handle extremely large amounts of data in a secure topology linking to a backbone or high capacity servers.

The Industrial Gigabit Ethernet Switch has 2K / 8K MAC Address table and offers wire-speed packets transfer performance without risk of packet loss. The Gigabit ports with 9K jumbo packet support can handle large amounts of data transmission in a secure topology linking to a backbone or high-power servers. The high data throughput of the device makes it ideal for most Gigabit environments.

All RJ-45 copper interfaces support 10/100/1000Mbps Auto-Negotiation for optimal speed detection through RJ-45 Category 6, 5 or 5e cables. Support standard for Auto-MDI/MDI-X that can detect the type of connection to any Ethernet device without requiring special straight or crossover cables.

The Flow Control function allows Industrial Gigabit Ethernet Switch supported routers and Servers to directly connect to this device for fast, reliable data transfer.

2.1.1 Product Overview

The PLANET Industrial Gigabit Ethernet Switch with 5/8 RJ-45 10/100/1000Mbps ports for high-speed network connectivity. The Industrial Gigabit Ethernet Switch can also automatically identify and determine the correct transmission speed and half / full duplex mode of the attached devices with its 5/8 ports. The Gigabit port with 9K jumbo frame feature supported, can handle extremely large amounts of data transmission in a secure topology linking to a backbone or high-power servers.

The Industrial Gigabit Ethernet Switch also supports Store-and-Forward forwarding scheme to ensure low latency and high data integrity, eliminates unnecessary traffic and relieves congestion on critical network paths. With an intelligent address recognition algorithm, the Industrial Gigabit Ethernet Switch could recognize up to 2K / 8K different MAC address and enables filtering and forwarding at full wire speed.

2.1.2 Switch Front Panel

Figure 2-1 & 2-2 & 2-3 & 2-4 shows a front panel of Industrial Gigabit Ethernet Switch.




Figure 2-1: IGS-501 Front Panel



Figure 2-2: IGS-801 Front Panel




Figure 2-3: IGS-501T Front Panel



Figure 2-4: IGS-801T Front Panel

2.1.3 LED Indicators

LED	Color	Function
P1	Green	Lit: indicate the power 1 has power.
P2	Green	Lit: indicate the power 2 has power.
FAULT	Green	Lit: indicate the either power 1 or power 2 has no power.
1000	Green	Lit: indicate the Switch is successfully connecting to the network at 1000Mbps. Off: indicate that the Switch is successfully connecting to the network at 10Mbps or 100Mbps. Blink: indicate that the Switch is actively sending or receiving data over that port.
100	Green	Lit: indicate the Switch is successfully connecting to the network at 100Mbps. Off: indicate that the Switch is successfully connecting to the network at 10Mbps or 1000Mbps. Blink: indicate that the Switch is actively sending or receiving data over that port.

2.1.4 Switch Upper Panel

The upper panel of the Industrial Gigabit Ethernet Switch consist one terminal block connector within two DC power inputs. Figure 2-5 shows the upper panel of the switch.

Figure 2-5 shows upper panel of Industrial Gigabit Ethernet Switch.


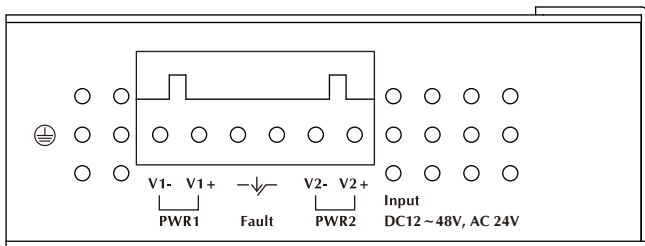


Figure 2-5: Industrial Gigabit Ethernet Switch Upper Panel

2.1.5 Wiring the Power Inputs


The 6-contact terminal block connector on the top panel of Industrial Gigabit Ethernet Switch is used for two DC redundant powers input. Please follow the steps below to insert the power wire.

1. Insert positive / negative DC power wires into the contacts 1 and 2 for POWER 1, or 5 and 6 for POWER 2.

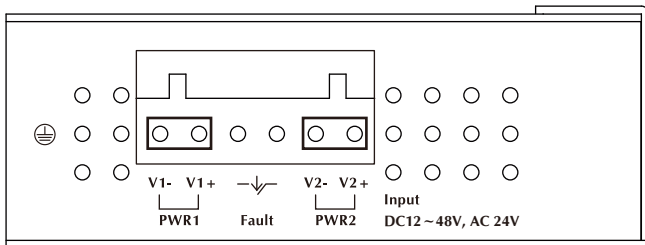

V1- V1 + V2 - V2 +

2. Tighten the wire-clamp screws for preventing the wires from loosening.

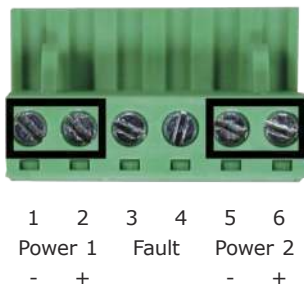

Note

The wire gauge for the terminal block should be in the range between 12 ~ 24 AWG.

2.1.6 Wiring the Fault Alarm Contact

The fault alarm contacts are in the middle of the terminal block connector as the picture shows below. Inserting the wires, the Industrial Gigabit Ethernet Switch will detect the fault status of the power failure, or port link failure (available for managed model) and then forms an open circuit. The following illustration shows an application example for wiring the fault alarm contacts.




Insert the wires into the fault alarm contacts



Note

1. The wire gauge for the terminal block should be in the range between 12 ~ 24 AWG.
2. Alarm relay circuit accepts up to 30V, max. 3A currents.

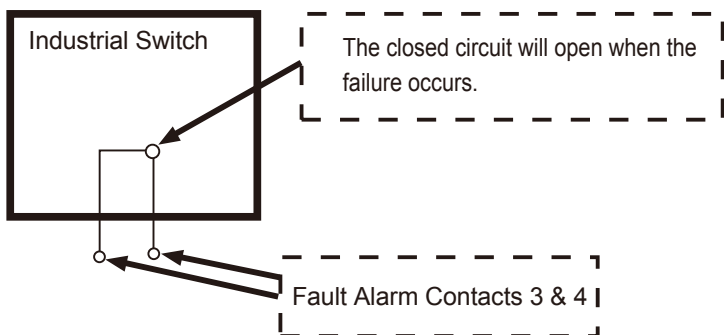

2.2 Mounting Installation

This section describes how to install the Industrial Gigabit Ethernet Switch and make connections to it. Please read the following topics and perform the procedures in the order being presented.

2.2.1 DIN-Rail Mounting

The DIN-Rail is screwed on the Industrial Gigabit Ethernet Switch when out of factory. When need to replace the wall mount application with DIN-Rail application on Industrail Gigabit Ethernet, please refer to following figures to screw the DIN-Rail on the Industrial Gigabit Ethernet Switch. To hang the Industrial Gigabit Ethernet Switch, follow the below steps:



Step 1: screw the DIN-Rail on the Industrial Gigabit Ethernet Switch.



Step 2: Lightly press the button of DIN-Rail into the track.



Step 3: Check the DIN-Rail is tightly on the track.

Step 4: Please refer to following procedures to remove the Industrial Gigabit Ethernet Switch from the track.



Step 5: Lightly press the button of DIN-Rail for remove it from the track.

2.2.2 Wall Mount Plate Mounting

To install the Industrial Gigabit Ethernet Switch on the wall, please follows the instructions described below.

Step 1: Remove the DIN-Rail from the Industrial Gigabit Ethernet Switch; loose the screws to remove the DIN-Rail.

Step 2: Place the wall mount plate on the rear panel of the Industrial Gigabit Ethernet Switch.




Step 3: Use the screws to screw the wall mount plate on the Industrial Gigabit Ethernet Switch.

Step 4: Use the hook holes at the corners of the wall mount plate to hang the Industrial Gigabit Ethernet Switch on the wall.

Step 5: To remove the wall mount plate, reverse steps above.

3. APPLICATION

In this paragraph, we will describe how to install Industrial Gigabit Ethernet Switch and the installation points for the attention.

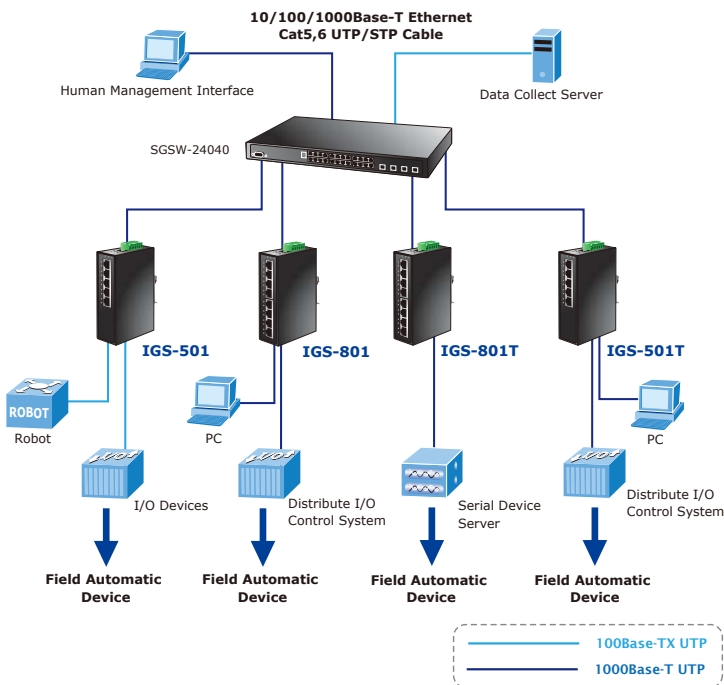

Installation Steps

Step 1: Unpack the Industrial Gigabit Ethernet Switch.

Step 2: Check the DIN-Rail is screwed on the Industrial Gigabit Ethernet Switch. (Please refer to DIN-Rail Mounting section for DIN-Rail installation If the DIN-Rail is not screwed on the Industrial switch). If you want to wall mount the Industrial Gigabit Ethernet Switch, then please refer to Wall Mount Plate Mounting section for wall mount plate installation.

Step 3: To hang the Industrial Gigabit Ethernet Switch on the DIN-Rail track or wall, please refer to the Mounting Installation section.

Step 4: Power on the Industrial Gigabit Ethernet Switch. (Please refer to the Wiring the Power Inputs section for power input) The power LED on the Industrial Gigabit Ethernet Switch will light up. Please refer to the LED Indicators section for meaning of LED lights.

Step 5: Prepare the twisted-pair, straight through Category 5 cable for Ethernet connection.

Step 6: Insert one side of Category 5 cables into the Industrial Gigabit Ethernet Switch Ethernet port (RJ-45 port) and another side of category 5 cables to the network devices' Ethernet port (RJ-45 port), ex: switch, PC or Server. The UTP port (RJ-45) LED on the Industrial Gigabit Ethernet Switch will light up when the cable connected with the network device. Please refer to the LED Indicators section for LED light meaning.



Be sure the connected network devices support MDI/MDI-X. If it does not support then use the crossover category 5 Cable.

Step 7: When all connections are all set and LED lights all show in normal, the installation is complete.

4. SWITCH OPERATION

4.1 Address Table

The Industrial Gigabit Ethernet Switch is implemented with an address table. This address table composed of many entries. Each entry is used to store the address information of some node in network, including MAC address, port no, etc. This information comes from the learning process of Industrial Gigabit Ethernet Switch.

4.2 Learning

When one packet comes in from any port. The Industrial Gigabit Ethernet Switch will record the source address, port no. And the other related information in address table. This information will be used to decide either forwarding or filtering for future packets.

4.3 Forwarding & Filtering

When one packet comes from some port of the Industrial Gigabit Ethernet Switch, it will also check the destination address besides the source address learning. The Industrial Gigabit Ethernet Switch will lookup the address-table for the destination address. If not found, this packet will be forwarded to all the other ports except the port which this packet comes in. And these ports will transmit this packet to the network it connected. If found, and the destination address is located at different port from this packet comes in, the Industrial Gigabit Ethernet Switch will forward this packet to the port where this destination address is located according to the information from address table. But, if the destination address is located at the same port with this packet comes in, then this packet will be filtered. Thereby increasing the network throughput and availability.

4.4 Store-and-Forward

Store-and-Forward is one type of packet-forwarding techniques. A Store-and Forward Industrial Gigabit Ethernet Switch stores the incoming frame in an internal buffer, do the complete error checking before transmission. Therefore, no error packets occurrence, it is the best choice when a network needs efficiency and stability.

The Industrial Gigabit Ethernet Switch scans the destination address from the packet-header, searches the routing table provided for the incoming port and forwards the packet, only if required. The fast forwarding makes the switch attractive for connecting servers directly to the network, thereby increasing throughput and availability. However, the switch is most commonly used to segment existing hubs, which nearly always improves overall performance. An Ethernet Switching can be easily configured in any Ethernet network environment to significantly boost bandwidth using conventional cabling and adapters.

Due to the learning function of the Industrial Gigabit Ethernet Switch, the source address and corresponding port number of each incoming and outgoing packet are stored in a routing table. This information is subsequently used to filter packets whose destination address is on the same segment as the source address. This confines network traffic to its respective domain, reducing the overall load on the network.

The Industrial Gigabit Ethernet Switch performs **"Store and Forward"** therefore, no error packets occur. More reliably, it reduces the re-transmission rate. No packet loss will occur.

4.5 Auto-Negotiation

The STP ports on the Industrial Gigabit Ethernet Switch have built-in **"Auto-negotiation"**. This technology automatically sets the best possible bandwidth when a connection is established with another network device (usually at Power On or Reset). This is done by detect the modes and speeds at the second of both device is connected and capable of, both 10Base-T and 100Base-TX devices can connect with the port in either Half- or Full-Duplex mode. 1000Base-T can be only connected in Full-duplex mode.

5. TROUBLESHOOTING

This chapter contains information to help you solve issues. If the Industrial Gigabit Ethernet Switch is not functioning properly, make sure the Industrial Gigabit Ethernet Switch was set up according to instructions in this manual.

The per port LED is not lit

Solution:

Check the cable connection of the Industrial Gigabit Ethernet Switch.

Performance is bad

Solution:

Check the speed duplex mode of the partner device. The Industrial Gigabit Ethernet Switch is run at Auto-negotiation mode and if the partner is set to half duplex, then the performance will be poor.

Per port LED is lit, but the traffic is irregular

Solution:

Check that the attached device is not set to dedicate full duplex. Some devices use a physical or software switch to change duplex modes. Auto-negotiation may not recognize this type of full-duplex setting.

Why the Industrial Gigabit Ethernet Switch doesn't connect to the network

Solution:

Check per port LED on the Industrial Gigabit Ethernet Switch. Try another port on the Industrial Gigabit Ethernet Switch. Make sure the cable is installed properly. Make sure the cable is the right type. Turn off the power. After a while, turn on power again.

Why the Industrial Gigabit Ethernet Switch doesn't connect to the network

Solution:

Check per port LED on the Industrial Gigabit Ethernet Switch. Try another port on the Industrial Gigabit Ethernet Switch. Make sure the cable is installed properly. Make sure the cable is the right type. Turn off the power. After a while, turn on power again.

APPENDIX A: NETWORKING CONNECTION

A.1 Switch's RJ-45 Pin Assignments


1000Mbps, 1000Base-T

Contact	MDI	MDI-X
1	BI_DA+	BI_DB+
2	BI_DA-	BI_DB-
3	BI_DB+	BI_DA+
4	BI_DC+	BI_DD+
5	BI_DC-	BI_DD-
6	BI_DB-	BI_DA-
7	BI_DD+	BI_DC+
8	BI_DD-	BI_DC-

10/100Mbps, 10/100Base-TX

RJ-45 Connector pin assignment		
Contact	MDI Media Dependant Interface	MDI-X Media Dependant
1	Tx + (transmit)	Rx + (receive)
2	Tx - (transmit)	Rx - (receive)
3	Rx + (receive)	Tx + (transmit)
4, 5	Not used	
6	Rx - (receive)	Tx - (transmit)
7, 8	Not used	


A.2 RJ-45 Cable Pin Assignments

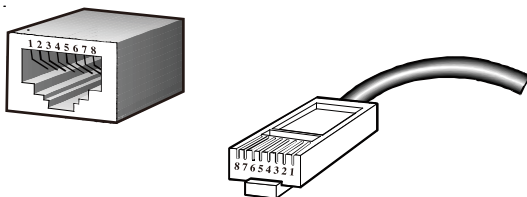

The standard RJ-45 receptacle/connector

There are 8 wires on a standard UTP/STP cable and each wire is color-coded. The following shows the pin allocation and color of straight cable and crossover cable connection:

Straight Cable




SIDE 1

- 1 = White/Orange
- 2 = Orange
- 3 = White/Green
- 4 = Blue
- 5 = White/Blue
- 6 = Green
- 7 = White/Brown
- 8 = Brown

SIDE 2

- 1 = White/Orange
- 2 = Orange
- 3 = White/Green
- 4 = Blue
- 5 = White/Blue
- 6 = Green
- 7 = White/Brown
- 8 = Brown

Cross Over Cable



SIDE 1

- 1 = White/Orange
- 2 = Orange
- 3 = White/Green
- 4 = Blue
- 5 = White/Blue
- 6 = Green
- 7 = White/Brown
- 8 = Brown

SIDE 2

- 1 = White/Green
- 2 = Green
- 3 = White/Orange
- 4 = Blue
- 5 = White/Blue
- 6 = Orange
- 7 = White/Brown
- 8 = Brown

Figure A-1: Straight-Through and Crossover Cable

Please make sure your connected cables are with same pin assignment and color as above picture before deploying the cables into your network.



EC Declaration of Conformity

For the following equipment:

*Type of Product : 5/8-Port 10/100/1000Mbps Industrial Ethernet Switch
*Model Number : IGS-501, IGS-801, IGS-501T, IGS-801T
* Produced by:
Manufacturer's Name : **Planet Technology Corp.**
Manufacturer's Address : 10F., No.96, Minquan Rd., Xindian Dist.,
New Taipei City 231, Taiwan (R.O.C.)

is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility Directive on (2004/108/EC).

For the evaluation regarding the EMC, the following standards were applied:

EN 55022	(Class A: 2010)
EN 61000-3-2	(2006 + A2:2009)
EN 61000-3-3	(2008)
EN 55024	(2010)
IEC 61000-4-2	(2008)
IEC 61000-4-3	(2006 + A1:2008 + A2 :2010)
IEC 61000-4-4	(2004 + A1:2010)
IEC 61000-4-5	(2005)
IEC 61000-4-6	(2008)
IEC 61000-4-8	(2009)
IEC 61000-4-11	(2004)

Responsible for marking this declaration if the:

☒ Manufacturer ☐ Authorized representative established within the EU

Authorized representative established within the EU (if applicable):

Company Name: Planet Technology Corp.

Company Address: 10F., No.96, Minquan Rd., Xindian Dist., New Taipei City 231, Taiwan (R.O.C.)

Person responsible for making this declaration

Name, Surname Kent Kang

Position / Title : Product Manager

Taiwan
Place

12, June, 2012
Date


Legal Signature

PLANET TECHNOLOGY CORPORATION

e-mail: sales@planet.com.tw http://www.planet.com.tw

10F., No.96, Minquan Rd., Xindian Dist., New Taipei City, Taiwan, R.O.C. Tel:886-2-2219-9518 Fax:886-2-2219-9528